

TABLE OF CONTENTS

Foreword	8
EVAP System (Evaporative Emission Control System)	
Catalytic Converter	
VIN AND SERIAL NUMBER	13
SPECIFICATIONS	
OPERATOR SAFETY	
General Safety Precautions	17
Equipment Modifications	18
Owner Responsibilities	21
Safe Riding Gear	22
AVOID DANGEROUS RIDING BEHAVIORS	25
HERITAGE VEHICLE VIEW	29
Rear Left View	29
Front Right View	30
ADVENTURE VEHICLE VIEW	31
Rear Left View	31
Front Right View	32
OPERATING PARTS	33
Clutch Lever	33

Front Hand Brake Lever	33
Handlebar Switch, LH (Heritage)	34
Handlebar Switch, LH (Adventure)	36
Handlebar Switch, RH (Heritage)	38
Handlebar Switch, RH (Adventure)	
Electronic Throttle Assy	
Locks	41
Gear Shift Lever	42
Rear Brake Lever	43
Side Stand	43
Mounting Base for License Plate	44
Passenger Handhold and Footrests	45
Telematics Box	46
INSTRUMENT (Heritage)	47
Instrument Indicators	
Instrument Display	
Instrument Adjustments	
INSTRUMENT (Adventure)	
Instrument Indicators	
Instrument Display	00

Instrument Adjustments	64
OPERATING YOUR VEHICLE	
Break-in Period	67
Daily Safety Inspection	68
Starting	
Starting Off	
Shifting, Riding	71
Brake	
Parking	74
SAFETY OPERATION	
Safe Riding Tips	
Additional Cautions for High Speed Operation	
MAINTENANCE	
Improper Use	
Key Points of Lubrication Schedule:	
Break-in Periodic Maintenance Chart	
After Break-in Periodic Maintenance Chart	
CLUTCH LEVER FREE-PLAY	
TOOL KIT	
FUEL SYSTEM	91

Fuel Tank	
Fuel Requirements	92
Octane Rating (RON)	
ENGINE ASSY	93
Oil Level Inspection	
Oil and Oil Filter Replacement	
Oil Capacity	
Spark Plug	
AIR INTAKE AND EXHAUST SYSTEM	
Exhaust Detecting System	98
Air Intake Valve	
Valve Clearance	98
Air Filter	99
Throttle Body	99
COOLING SYSTEM	
Radiator and Cooling Fan	100
Radiator Hoses	
Coolant	
Coolant Level Inspection	103
Coolant Replenishment	104

TIRES AND CHAINS	105
Tire Specifications	105
Tire Friction	
Spokes and Rims Repair (Adventure)	108
Drive Chain Inspection	
Drive Chain Tension Adjustment	110
BRAKE SYSTEM	112
Front Brake Lever Inspection	
Rear Brake Pedal Inspection	
Brake Fluid Level Inspection	
Brake Fluid Replenishment	
Brake Disc Inspection	116
Brake Caliper Inspection	
Anti-lock Braking System (ABS)	117
SHOCK ABSORBER	118
Shock Absorber Inspection	
Rear Shock Absorber Adjustment	
Front Shock Absorber Adjustment	
ELECTRICAL SYSTEM AND LIGHT SIGNALS	
Battery	

Battery Mounting	126
Lights	
Fuses	128
CATALYTIC CONVERTER	129
EVAPORATIVE EMISSION CONTROL SYSTEM	130
MOTORCYCLE CLEANING AND STORAGE	131
General Precautions	131
Washing the Vehicle	132
Decorating the Surface	133
Windshield and Other Plastic Parts	
Chrome and Aluminum	133
Preparation for Storage	134
Preparation After Storage	
COMMON PROBLEMS AND CAUSES	136
GENERAL TORQUE CHART	139
CRUCIAL TORQUE CHART	139

Foreword

Thank you for purchasing a CFMOTO vehicle, and welcome to our world-wide family of CFMOTO enthusiasts. Be sure to visit us online at www.cfmoto.com for the latest news, new product introductions, upcoming events, and more.

CFMOTO is an international company that specializes in the development, manufacture, and marketing of all-terrain vehicles, utility vehicles, large displacement motorcycles, and their core components. Founded in 1989, CFMOTO is devoted to the development of independent brand cultivation and R&D innovation.

CFMOTO products are currently distributed through more than 2000 companions worldwide in more than 100 countries and regions. CFMOTO is edging into the advanced ranks in the world of powersports, and aims to supply superior products to dealers and fans globally.

For safe and enjoyable operation of your vehicle, be sure to follow the instructions and recommendations in this owner's manual. Your manual contains instructions for minor maintenance. Information about major repairs is outlined in the CFMOTO Service Manual.

Your CFMOTO dealer knows your vehicle best and is interested in your total satisfaction. Be sure to return to your dealership for all of your service needs during, and after, the warranty period.

Due to constant improvements in the design and quality of productions components, some minor discrepancies may result between the actual vehicle and the information presented in this publication.

Depictions and/or procedures within are intended for reference use only.

The manual is for CF700-2D and CF700-2C

Before every ride, please inspect your vehicle and follow the basic maintenance procedures before riding. Please keep this manual together with your vehicle, even when transferring the vehicle to others.

Zhejiang CFMOTO power Co., Ltd reserves the final explanation rights of the owner's manual.

⚠DANGER

Operating, servicing and maintaining on-road or off-road vehicles can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.

EVAP System (Evaporative Emission Control System)

(If equipped)

When required by environmental emissions regulations, this vehicle is manufactured with a fuel evaporation system (EVAP) to prevent fuel vapors entering the atmosphere from the fuel tank and fuel system.

During routine maintenance, visually inspect all hose connections for leaks or blockage. Ensure the hoses are not clogged or kinked, which could damage the fuel pump or distort the fuel tank. No other maintenance is necessary.

Contact your dealer if repair is required. Do not modify the EVAP system. Modifying any part of this system will violate environmental emissions regulations.

Catalytic Converter

CAUTION: Please pay attention to the following to protect your catalytic converter:

- Use only unleaded gasoline. Even gasoline that contains a little lead could damage the reactive metals contained in the catalytic converter and disable it.
- Never add rust preventive oil or engine oil into the muffler. Doing so could damage the catalytic converter.

NOTE

Some features described within this manual may not apply to models in your market.

All descriptions and directions given are from the operator's perspective when properly seated.

Signal Words

A signal word calls attention to a safety message or messages, a property damage message or messages, and designates a degree or level of hazard seriousness. The standard signal words in this manual are DANGER, WARNING, CAUTION and NOTE.

The following signal words and symbols appear throughout this manual and on your vehicle. Your safety is involved when these words and symbols are used. Become familiar with their meanings before reading the manual:

<u>∧</u>DANGER

This safety alert and icon indicates a potential hazard that may result in serious injury or death.

∴WARNING

This safety alert and icon indicates a potential hazard that may result in minor or moderate personal injury and/or damage to the vehicle.

⚠CAUTION

This safety alert and icon indicates a potential hazard that may result in damage to the vehicle.

NOTE

A note or notice will alert you to important information or instructions.

READ THE OWNER'S MANUAL FOLLOW ALL INSTRUCTIONS AND WARNINGS

ADANGER

Read, understand, and follow all of the instructions and safety precautions in this manual and on all product labels. Failure to follow the safety precautions could result in serious injury or death.


↑ DANGER


The engine exhaust gas from this product contains CO, which is deadly gas and could cause headaches, giddiness, loss of consciousness, or even death.


VIN AND SERIAL NUMBER

Please record the VIN number, motor serial number and nameplate at the position indicated on the following illustration.

VIN:		
Motor Serial Number: _		
Vehicle Plate		

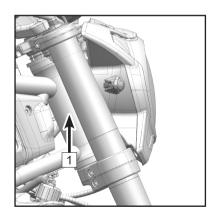

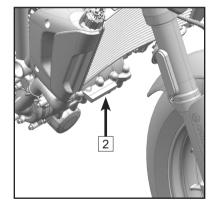

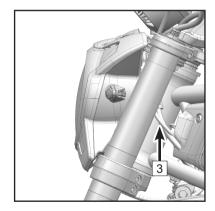

1 VIN	2	En	igine Serial Number	3	Vehicle Plate

SPECIFICATIONS

	700 CL-X	Heritage	700 CL-X Adventure		
	L3e-A3 L3e-A2		L3e-A3	L3e-A2	
Performance					
Max power	69.06Hp (51.5 Kw)	46.26Hp (34.5 Kw)	69.06Hp (51.5 Kw)	46.26Hp (34.5 Kw)	
	/ 8750 rpm	/ 7250 rpm	/ 8500 rpm	/ 7250 rpm	
Max torque	44.9ft-lb (60.9 N•m)	41.2ft-lb (55.9 N•m)	44.9ft-lb (60.9 N•m)	40.2ft-lb (54.5 N•m)	
	/ 6500 rpm	/ 5500 rpm	/ 6500 rpm	/ 5750 rpm	
Min. turn diameter		15.4 ft	: (4.7 m)		
Top designed speed	112 mph (180 km/h)	96 mph (160 km/h)	112 mph (180 km/h)	96 mph (160 km/h)	
Size					
Length	2105 mm				
Width	865	mm	892 mm		
Height	1200 mm		1290 mm		
Wheelbase	1435 mm				
Seat height	800	mm	830	mm	
Ground clearance	160	mm	170 mm		
Curb weight	198	ß kg	203	3 kg	
Engine					
Type	Twin cylinder in-line, four stroke, liquid cooled				
Displacement	693 ml				
Bore×stroke	83 mm × 64 mm				
Compression ratio	11.6 : 1				

Starting system	Electric starter		
Fuel supplying	EFI		
system			
Ignition control	ECU Ignition		
system			
Lubricating system	Pressure splash, semi-dry sump		
Oil capacity	When changing an oil filter: 2.32 qt (2.2 L)		
	First choice: SAE 10W-40 SJ JASO MA2		
Engine oil type	Second choice:SAE 10W-30 SJ / SAE 10W-50 SJ / SAE 20W-40 SJ /		
	SAE 20W-50 SJ JASO MA2		
Coolant capacity	1600 mL + 160 mL		
Idle speed	1600 r/min ± 160 r/min		
Transmission			
Transmission type	6-speed, international standard gear		
Clutch type	Wet, multi disc, manually		
Driving system	Chain drive		
Primary reduction	2.095		
ratio			
Final reduction ratio	3.067		

	1 st	2.3	53		
	2 nd				
Coor rotio	3 rd	3 rd 1.333			
Gear ratio	4 th				
	5 th	5 th 0.966			
	6 th	0.8	52		
Chassis					
Tiro oizo	Front	110/80 R18	110/80 R18		
Tire size	Rear	180/55 R17	170/60 R17		
Dim size	Front	MT3.0×18	MT3.0×18		
Rim size	Rear	MT5.5×17	MT4.5×17		
Capacity of fuel		13 L			
tank					
Average fuel		4.8 L / 100km			
consumption per					
100 Km					
Electric components					
Battery		12 V / 11.2 Ah			
Headlight		LED			
Turning light		LED			
Tail light	LED				

OPERATOR SAFETY

General Safety Precautions

↑ WARNING

Please read this manual carefully before operating the vehicle and understand all safety warnings, precautions and operating procedures.

Age Limit

This model is for adults only. Anyone under the age of 18 is not allowed to operate the car, and children under the age of 12 are not allowed to ride CFMOTO's passenger-carrying vehicle.

Know Your Vehicle

As the operator of the vehicle, you are responsible for your personal safety, the safety of others, and the protection of the environment. Read and understand your owner's manual, which includes valuable information about all aspects of your vehicle, including safe operating procedures.

Equipment Modifications

CFMOTO is concerned with the safety of our customers and of the general public. Therefore, we strongly recommend that consumers should not mount on a vehicle, any equipment that may increase the speed or power of the vehicle, or make any other modifications to the vehicle for these purposes. Any modifications to the original equipment of the vehicle create substantial safety hazards and increase the risk of body injury. The warranty on your vehicle is terminated if any unapproved accessory equipment has been added to the vehicle, or if any modifications have been made to the vehicle that increase its speed or power.

NOTE:

Any specific equipment that may change the handling and performance of the vehicle, including but not limited to side boxes, exhaust, side wheels, etc. Use only approved equipment and familiarize yourself with their functions and roles on the vehicle.

Avoid Carbon Monoxide Poisoning

All engine exhaust contains carbon monoxide, a deadly gas. Breathing carbon monoxide can cause headaches, dizziness, drowsiness, nausea, giddiness and even death.

Carbon monoxide is a colorless, odorless, tasteless gas that may be present even if you do not see or smell any engine exhaust. Deadly levels of carbon monoxide can accumulate rapidly, and you can quickly be overcome and unable to save yourself. Also, deadly concentration of carbon monoxide can remain for hours or days in enclosed or poorly ventilated areas.

To prevent serious injury or death from carbon monoxide:

- Never run the vehicle in poorly ventilated or partially enclosed areas.
- Never run the vehicle outdoor where engine exhaust can be drawn into a building through openings such as windows and doors.

Avoid Gasoline Fires and Other Hazards

Gasoline is extremely flammable and highly explosive. Fuel vapors can spread and be ignited by a spark or flame many feet away from the engine. To reduce the risk of fire or explosion, follow these instructions:

- Strictly adhere to proper fueling procedures.
- Never start or operate the engine if the fuel cap is not properly mounted. Gasoline is poisonous and can cause injury or death.
- · Never siphon gasoline by mouth.
- If you swallow gasoline, get any in your eye (s), or inhale gasoline vapor, see a doctor immediately.
- If gasoline spills on you, wash with soap and water and change your clothes.

Fuel Minimum Octane Rating and Safety Warnings

The minimum recommended fuel for this vehicle is minimum 95# octane gasoline, premium or intermediate gasoline ((a maximum blend of 10% ethanol is allowed). Non-oxygenated (ethanol-free) fuel is recommended for best performance in all conditions.

↑ WARNING

Gasoline is highly flammable and explosive under certain conditions.

Allow the engine and exhaust system to cool before filling the tank.

Always be highly cautious whenever handling gasoline.

Always refuel the vehicle when the engine stopped outdoors or in well-ventilated areas.

Do not smoke or allow open flames or sparks in or near the area where refueling is performed, or where gasoline is stored.

Do not overfill the tank. Do not fill oil to the tank neck.

If gasoline spills on your skin or clothing, immediately wash it off with soap and water and change clothing. Never start the engine or let it run in an enclosed area. Engine exhaust fumes are poisonous and can cause loss of consciousness or death in a short time.

The engine exhaust from this product contains chemicals known to cause cancer, birth defects or other reproductive harm. Operate this vehicle only outdoors or in well-ventilated areas.

Avoid Burns From Hot Parts

The exhaust system and engine become hot during operation. Avoid touching them during and shortly after operation to avoid burns.

Owner Responsibilities

Be Qualified and Responsible

Read this Owner's Manual and the warning labels on this vehicle carefully. Take a safety training course on open areas if possible and practice at low speed. Higher speed requires greater experience, knowledge and suitable riding conditions. Be familiar with the control technology and the general operations of the vehicle.

This vehicle is an ADULT VEHICLE ONLY. The operator must acquire a driving license as required by local laws and regulations. Operators must be tall enough with physical capacity to: be properly seated, hold the handlebar with both hands, fully operate the clutch lever with the left hand, fully operate the brake lever with the right hand, fully operate the foot brake lever with the right foot, be able to firmly put both feet on the foot pegs, and be able to balance the vehicle with the feet when stopped and seated.

Carrying a Passenger

- Only carry one passenger. The passenger must be properly seated in the passenger seat. The
 passenger should be over 12 and be tall enough to always be properly seated when holding
 handhold, and feet firmly put on the foot pegs.
- Instruct the passenger to read the vehicle's safety labels.
- Never carry a passenger who has used drugs or alcohol, or is tired or ill. These slow reaction time and impair judgment.
- Never carry a passenger if you think that their ability or judgment is insufficient to concentrate on the terrain conditions and adapt accordingly.

Safe Riding Gear

Always wear clothing suited to the type of riding for the driver and passenger, includes:


- 1 An approved helmet
- 2 Goggles
- 3 Gloves
- 4 Long-sleeved shirts or jackets
- 5 Long pants
- 6 Over-the-ankle boots

According to the actual weather, you may need extra apparel, such as anti-fog goggles, thermal underwear and a face guard for cold weather. The operator must never wear loose clothing that may get entangled in the vehicle or on tree branches and shrubs.

Helmets and Goggles

An approved helmet can prevent a serious head injury if an accident occurs. Please note that even the best helmet is no guarantee against injury.

The helmet you choose should meet the standard for your country or area and its size should suit you. A closed-face helmet with face shield will be better at preventing impacts from insects, flying rocks, dust and scattered debris, etc.

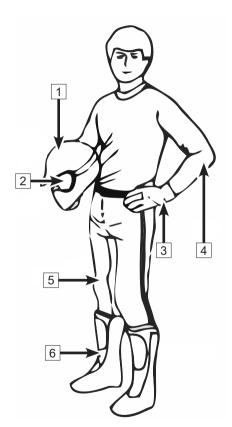

An open-face helmet can not offer the same protection for your face and jaw. Please wear detachable face masks and goggles when wearing an open-face helmet.

Do not depend on eyeglasses or sunglasses for enough eye protection, as they may fly out or shatter in case of an accident to cause second damage, and they can not prevent wind and airborne objects from getting into eyes.

Use tinted masks or goggles only during the day in bright light, do not use them at night or in poor light. They may affect your ability to distinguish colors. Do not use them if your color discrimination is affected.

Gloves

Full-finger gloves could protect your hands from wind, sun, heat, cold, and splash. Well-fitted gloves are helpful for steering and relieving hand fatigue. If the gloves are too heavy, it will be difficult to operate the vehicle.

A pair of strong motorcycle gloves offers protection for your hands in the event of an accident or turnover. Snowmobile gloves offer better protection when operating in cold areas.

Jackets, Pants and Motorcycle Suits

Wear a jacket or a long-sleeved shirt and long pants, or a full set of riding suit. Quality protective gear will provide comfort, and it can help you avoid being distracted by adverse environmental elements. In case of an accident, good quality protective gear made of sturdy material may prevent or reduce injury.

When riding in a cool weather, protect yourself against hypothermia which is a state of low body temperature and can cause loss of concentration, slowed reactions and loss of smooth, precise muscle movement. In cool conditions, proper protective gear like a windproof jacket and insulated layers of clothing are essential. Even while riding at moderate temperatures, you can feel very cold due to the wind.

Protective gear that is appropriate for cold-weather riding may be too hot when stopped. Dress in layers so that clothing can be removed as desired. Topping the protective gear with a windproof outer layer can prevent cold air from reaching the skin.

Boots

Always wear closed-toe, over-the-ankle boots. Sturdy over-the-ankle boots with non-slip soles offer more protection, and allow you to put your foot properly on the foot pegs. Avoid long shoelaces that could get tangled in the vehicle components. In winter, rubber-soled boots with either nylon or leather uppers and removable felt liners are best suited. Avoid rubber boots which may get trapped behind or in the foot brake pedal, impairing proper operation.

Other Riding Gear

Rain Gear

When riding in rainy weather, a rain suit or a waterproof riding suit is recommended. On long rides, it is a good idea to carry rain gear. Keeping clothes is beneficial for keeping operators being much more comfortable and alert.

Hearing Protection

Long-term exposure to wind and engine noise when riding can cause permanent hearing loss. Properly worn hearing protective gear such as earplugs can help prevent hearing loss. Check local laws before using any hearing protective gear.

AVOID DANGEROUS RIDING BEHAVIORS

The following behaviors may cause serious consequences, so instructions must be followed to avoid dangerous behaviors.

Wrong Operations

<u>MARNING: Wrong operations may cause serious damage to the operator, passenger and people around.</u>

Read every instruction in this manual and be familiar with every function of this vehicle. Must participate in the safety training and know how to operate the vehicle properly in different situations and on different types of terrain.

Age Limit

MARNING: It is restricted to allow people under 18 to ride the vehicle and people under 12 to be passengers.

Severe injury and/or death could occur if a child under the minimum age limit operates this vehicle. Even though a child may be within the recommended age group for operating, he/she may not have the skills, abilities, or judgment needed to operate safely and could be susceptible to accidents or injuries.

Illegal Carrying

MARNING: It is restricted to carry the passengers more than allowed.

Carrying the passengers more than allowed is illegal and will much affect the vehicle's riding performance and may cause serious accidents.

Safe Riding Gear

Unapproved helmets increase the risk of head injury and death in the event of an accident; Failure to use goggles increases the risk of eye injury and death in the event of an accident; Always wear a whole set of gear to reduce accidents and increase your own protection.

Drinking and Medication

MWARNING: Do not operate a vehicle under the influence of alcohol, medication or drugs.

Drinking, taking medication and taking drugs will seriously affect drivers' judgment and reaction ability, as well as their perception and balance, which will greatly increase the incidence of accidents. Do not operate vehicles after drinking, taking medication or taking drugs.

Speeding

MARNING: No speeding.

Speeding increases the risk of losing control of the vehicle, leading to accidents. Choose your driving speed based on vehicle load, terrain, visibility, driving conditions, and never exceed the maximum speed.

Stunts

MARNING: Do not try stunts.

All stunts are dangerous, including but not limited to slippery tires, jumping, side-slip, front wheel upturn, etc. Stunt or demonstration riding can result in serious accidents. Always use normal driving methods.

Inspections and Maintenance

MWARNING: Check vehicle's conditions before driving and maintaining vehicle regularly.

Checking vehicle's conditions before driving can reduce the probability of accidents. Maintain the vehicle regularly to ensure the equipment is in good condition. Please follow the instructions for inspection and before driving and regular maintenance.

Lift Hands and Feet From the Vehicle

MARNING: Do not lift your hands off the handlebars or your feet off the pedals when driving.

Even leaving with only one hand or foot can reduce your ability to control the vehicle or cause you to lose your balance and fall off from the vehicle. If the driver's feet are not firmly put on the pedal, they may be unable to operate the brake or accelerator in time or may be influenced by external environmental factors, resulting in an accident.

Tire Size

<u>MARNING: Do not use tires with wrong gauge, wrong tire pressure or uneven tire pressure.</u>

Wrong tires may cause accidents. It is forbidden to use wrong tires. Check the tire pressure regularly to ensure that the tires are always within the normal pressure range.

Modifications

Any modifications will affect vehicle handling, which can lead to accidents. It is prohibited to mount any equipment which would increase the speed or power of the vehicle, or to make any other modifications to the vehicle for these purposes. All equipment and accessories added to the vehicle must be original or designed for use on the vehicle.

Keys

⚠WARNING: Do not leave keys on the vehicle. Lock the stem lock before leaving the vehicle.


Keys left on the vehicle may result in unauthorized use of the vehicle, causing an accident or property damage, so please take away the key when the vehicle is not in use.

Dangerous Transportation

MARNING: Do not transport inflammable, explosive or other dangerous goods.


Transportation of dangerous goods may cause serious injuries or accidents.

HERITAGE VEHICLE VIEW

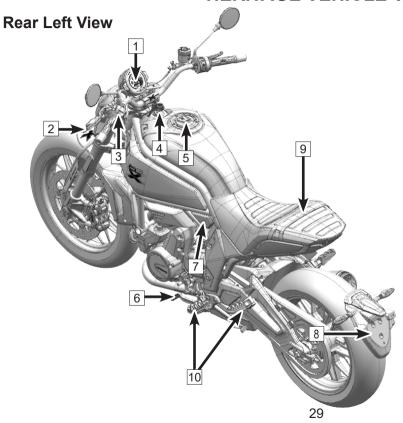


- 1 Instrument
- 2 Clutch Lever
- 3 Handlebar Switch, LH
- 4 Ignition Switch Lock
- 5 Fuel Tank Lock
- 6 Gear Shift Lever
- 7 Seat Lock
- 8 Mounting Base for License Plate
- 9 Passenger Armrest
- 10 Footrest Kit


Front Right View

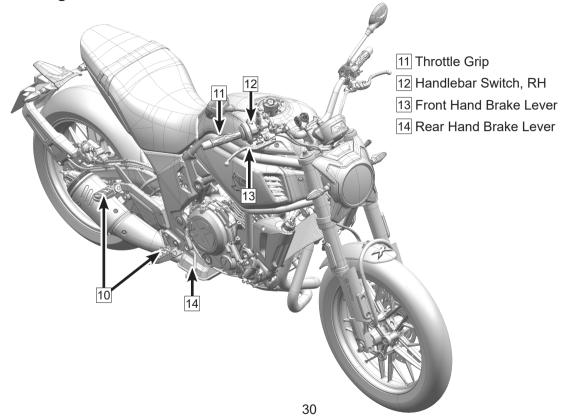

ADVENTURE VEHICLE VIEW

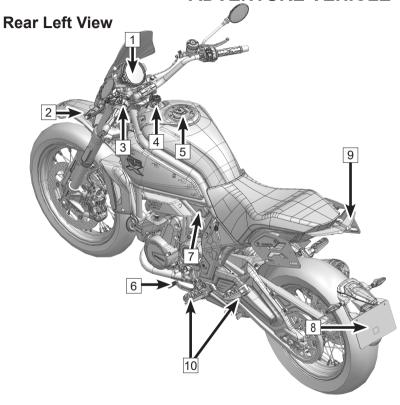

- 1 Instrument
- 2 Clutch Lever
- 3 Handlebar Switch, LH
- 4 Ignition Switch Lock
- 5 Fuel Tank Lock
- 6 Gear Shift Lever
- 7 Seat Lock
- 8 Mounting Base for License Plate
- 9 Passenger Armrest
- 10 Footrest Kit

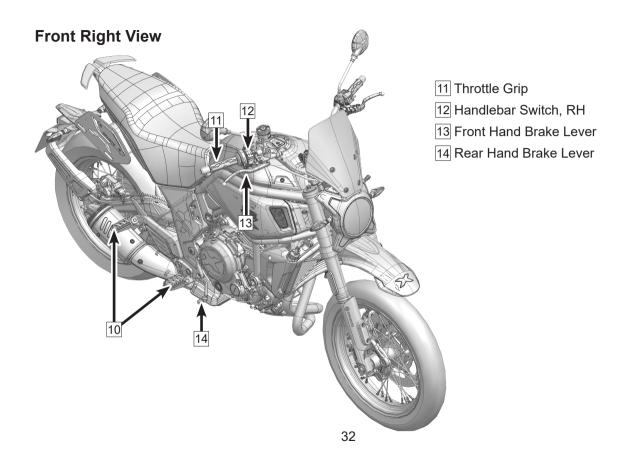


OPERATING PARTS

Clutch Lever

Clutch lever 1 is on the left side of handlebar. The clutch is a cable clutch


Adjust the clutch lever's distance to the handlebar by turning the clutch lever adjusting knob.

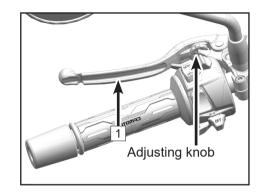

Front Hand Brake Lever

Front hand brake lever 2 is on the right side of handlebar. Front brake caliper activates braking by using the front hand brake lever.

Adjust the braking lever's distance to the handlebar by turning the hand brake lever adjusting knob.

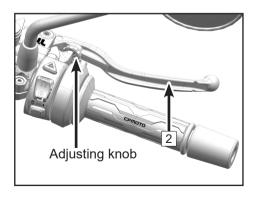



Handlebar Switch, LH (Heritage)

Left handlebar switch 1 is on the left side of the handlebar.


Functions of Left Handlebar Switch

2	Mode button		Press to shift between ECO mode and SPORT mode.		
	Turning light		Push this switch to the right, the right turning light will activate.		
switch		Push this switch to the left, the left turning light will activate.			
4	Horn button	Þ	Short press, the horn will sound.		
5 Mode button		Short press to switch to OFF-ROAD mode.			
	ABS	Long press to activate or close ABS.			

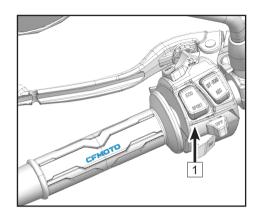

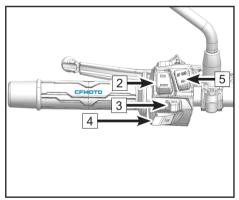

r				
	6	Dimmer push switch		Turn to this position, high beam lights on.
				Turn to this position, low beam lights on.
				Short press this button, passing light will flash.
	7	Cruise control system	RES/+ SET/-	Please refer to instrument feature 8, Cruise Control.

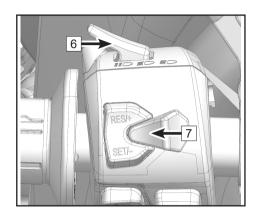


Handlebar Switch, LH (Adventure)

Left handlebar switch 1 is on the left side of the handlebar.

Functions of Left Handlebar Switch


2	Mode button	STREET OFF-ROAD	Press to shift between STREET mode and OFF-ROAD mode.
3	Turning light switch	\Rightarrow	Push this switch to the right, the right turning light will be on.
١		4	Push this switch to the left, the left turning light will be on.
4	Horn button	b	Press and the horn will sound.

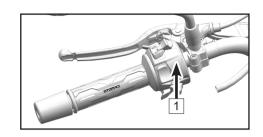

NOTE:

Only when the vehicle is at rest, the operation of closing the rear ABS can be carried out.


When the instrument displays the off-road mode, long press the off-road button (about 3s), the ABS of the rear wheel is closed, and the ABS indicator light of the instrument keeps flashing (1Hz);

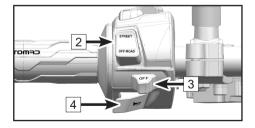

Switch the STREET mode or long press the off-road button (about 3s) to turn on the ABS of the rear wheel and turn OFF the ABS indicator of the instrument.

Switch the STREET mode or long press the off-road button (about 3s) to turn on the ABS of the rear wheel and turn OFF the ABS indicator of the instrument.

	Dimmer push switch	≣D	Turn to this position, high beam lights will be on.		
5		≣ D	Turn to this position, low beam lights will be on.		
		≣D	Press this button, passing light will flash.		
6	Cruise control system	RES/+ SET/-	Please refer to Instrument Display, Cruise Control.		

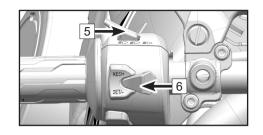



Handlebar Switch, RH (Heritage)

Right handlebar switch $\boxed{1}$ is on the right side of the handlebar.

Right handlebar switch function

2	Hazard flasher switch		Short press to turn on the hazard flasher light.
	Cton oviitale		Turn to this position, the vehicle turns off.
3	Stop switch		Turn to this position, start the vehicle.
4	TCS switch	(TC)	Short press to activate or close TCS

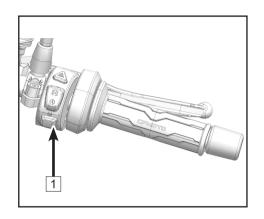

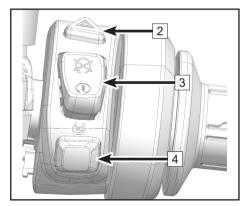



Handlebar Switch, RH (Adventure)

Right handlebar switch $\boxed{1}$ is on the right side of the handlebar.

Functions of Right Handlebar Switch

2	Hazard flasher switch		Press to turn on the hazard flasher light.
	Stop and start		Turn to this position, the vehicle stops.
3	switches	(3)	Turn to this position, the vehicle starts.

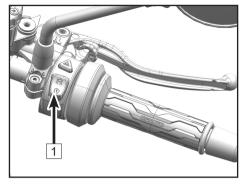


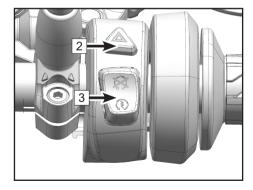

Electronic Throttle Assy

This vehicle is equipped with an electronic throttle assy 1. When rotating the throttle grip, the ECU determines the optimal amount of fuel to supply by combining the information of throttle open angle, engine RPM, gear position, engine temperature and vehicle driving mode, etc.

Electronic throttle offers optimal amount of fuel to supply and better throttle response for the driver.

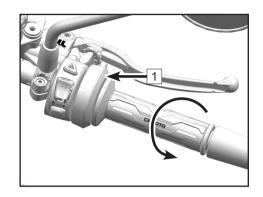

Locks


Ignition switch 1


Handlebar lock		Turn the handlebar left to the end, then turn the key to the lock indicator to lock the handlebar.
Stop		Turn the key to this position, the engine cannot be started and all the vehicle's power circuits are disconnected.
Start	\bigcirc	Turn the key to this position, the engine can be started and all the vehicle's power circuits are connected.



Before opening the fuel tank lock: The vehicle must be stopped and the engine must be closed.

Open the fuel tank lock cover; Insert the key and turn the key to release the lock; Open the fuel tank cap.

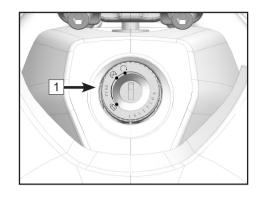


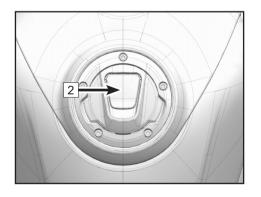

Seat Lock 1


The seat lock is on the left side of the vehicle.

The seat can be removed by inserting the key and turning to release the lock.

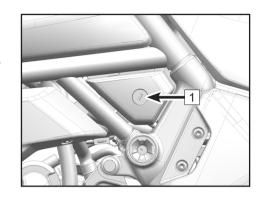

Gear Shift Lever


The gear shift lever 2 is on the left side of the engine.

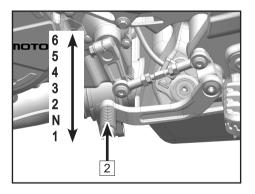

Rear Brake Lever

The rear brake lever 1 is on the right side of the engine.


Step on rear brake lever to make rear brake caliper to stop the vehicle.

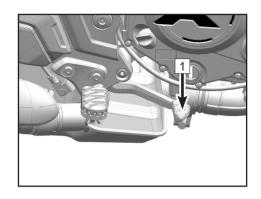

Side Stand

The side stand 2 is on the left side of the vehicle, and is used for parking;

When the side stand is used, the vehicle can only be started with neutral gear.

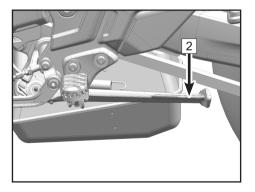



Mounting Base for License Plate

The lower part of the license plate is equipped with Velcro 1. When mounting the license plate, follow the following steps to reduce the risk of accidentally dropping or losing the license plate.

- · Remove the accompanying billboard;
- Clean the plate from dust, grease and other dirt;
- Remove the protective film of Velcro;
- Align the plate hole with the plate board hole;
- Press the area where the license plate meets the Velcro for at least 30 seconds until the Velcro is firmly attached;
- · Tighten mounting bolts;


Inspect license plate mounting bolts before daily riding.

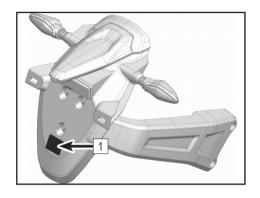


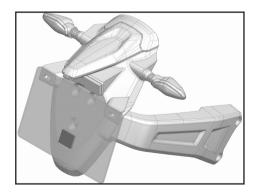

Passenger Handhold and Footrests


A passenger handhold 1 is fixed on the motorcycle seat for passenger to hold on during riding.

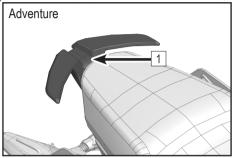

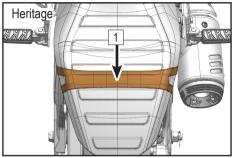

Footrests 2 are pedals or footboards fixed on the motorcycle for the operator and passenger to put their


feet.

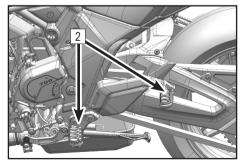

Telematics Box


T-BOX is an optional part, and when you purchase a vehicle, you'd better check with dealer if it's equipped with a telematics box, or T-BOX.

The T-Box is an intelligent vehicle terminal that builds a communication bridge between owners and vehicles through the CFMOTO RIDE APP installed on a mobile device. The CFMOTO RIDE APP is available for download from the Apple App Store for iPhone or Google Play for Android.

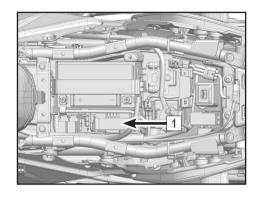

INSTRUMENT (Heritage)

Instrument Indicators

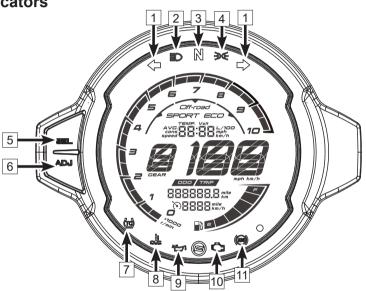

1	Turn signal indicator	4	Position light indicator	7	TCS indicator	10	Fault indicator
2	High beam indicator	5	SEL button	_ ×	Coolant temperature warning indicatorr	11	ABS indicator
3	Neutral indicator	6	ADJ button	9	Oil pressure indicator		

Turning signal indicator-1

When turning light switch is in this position "\(\sigma\)", left turning signal indicator will flash.

When turning light switch is in this position "", right turning signal indicator will flash.

High beam indicator- 2

When the light switch is in this position "♣,", and the dimmer switch is in this position "€D", it will be on.

Neutral indicator-3

When the vehicle gear is in neutral position, it will be on.

Position light indicator - 4

When this indicator is on, it means the position light is turned on.

SEL button-5

To select the instrument functions. Use it together with ADJ button.

ADJ button-6

To adjust or set the instrument functions. Use together with SEL button.

TCS indicator - 7

When there are some TCL faults or the TCL function is closed, this indicator is on. When the TCL function is activated, the indicator flashes.

Coolant temperature warning indicator-8

It will flash when the coolant temperature is higher than 115°C.

Oil pressure indicator- 9

When it is on, the oil level is very low, the oil pump cannot work properly or the oil pipeline is blocked. Stop the engine immediately and inspect for causes.


Fault indicator- 10

When the vehicle detects a fault in its circuit, it will be on.

ABS indicator-11

If ABS works normally, it will flash when vehicle is in parking state, and it will be off when it is in running state. If there is any fault, ABS indicator will keep on.

Instrument Display

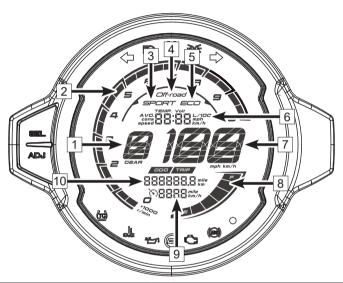

1	Gear display	4	OFF-ROAD Mode	7	Speed display	10	Odometer display
2	Tachometer	5	Economic Mode	8	Fuel display		
3	Sport Mode	6	Rider Information Center	9	Cruise control system display		

Gear display- 1

Displays the current vehicle gear position.

Tachometer- 2

Displays the engine rotating speed.

Sport mode- 3

When the mode key is switched to the sport mode, the mode is displayed in this area.

OFF-ROAD Mode-4

When the mode key is switched to the off-road mode, the mode is displayed in this area.

Economy mode-5

When the mode key is switched to the eco mode, the mode is displayed in this area.

Rider Information Center- 6

The rider information center displays several information categories: time, average speed, instantaneous fuel consumption, battery voltage and coolant temperature.

Speed display- 7

Displays the current vehicle speed.

Fuel Display-8

Displays the current fuel volume. When the fuel gauge indicator flashes, the vehicle has reserve fuel of approximately 3.8L, which can support approximately 50km of travel with moderate throttle use. Please arrange your travel properly and fill the fuel tank as soon as possible. total range display.

Cruise control system display- 9

The cruise control system display area displays the current selected target speed.

The cruise control system consists of a toggle switch and speed adjusting button for operation, located

on the left handlebar' control switch. When the vehicle speed is between 24.8 (40) and 80.7mph (130Km/h), and the gear is between fourth (4th) and sixth (6th) gear, the cruise control system is available. Once activated, the throttle control does not require manual work, and the vehicle maintains the selected speed. The fastest speed can not exceed 80.7mph (130Km/h).

To activate cruise control:

- Once the vehicle is operating at the designated speed and transmission gear, toggle the control system switch to activate the cruising function.
- Short press "SET/-", the system will set the initial target speed according to the current speed and start cruising.
- Short press 'RES/+' to increase the target speed by 1.2mph (2 Km/h).
- Short press 'SET/-' to decrease the target speed by 1.2mph (2 Km/h).
- Long press of the speed adjusting button to increases or decreases the target speed continuously.

To deactivate cruise control:

- Any braking action, clutch action, or throttle action will deactivate the cruise control system.
- If at any time the actual vehicle speed reduces to less than 24.8mph (40 Km/h), the cruise control system function deactivates automatically.
- Using the control toggle switch or turning off the vehicle power will deactivate the cruise control
 completely.

ADANGER

To prevent accidental activation of cruise control, end cruise control when this function is not used.

Please ride the vehicle carefully when adjust the speed by the speed adjusting button.

Do not use cruise control in heavy traffic, sharp turns, winding roads, wet or icy roads, or on steep hills, as it may cause loss of control.

Riders are main operators of the motorcycle, and their control is prior to the cruise control system. When the motorcycle is cruising at a constant speed, control of the motorcycle is returned to riders when they use the brake and switch.

Cruise control is only a rider-assistant system, do not rely on it too much, always ride carefully.

Odometer display- 10

Displays vehicle odometer, trip meter, or EFI fault code. If there are multiple fault codes, the next code will display every three seconds. When the fault codes are displayed in turn, short press 'ADJ' to return to the odometer display.


Instrument Adjustments

	ODO TRIP Mileage display area										
Item	Display	SEL	ADJ	Operation	Result						
Odometer	ODO	Press		Shift to trip meter	Trip meter						
Trip meter	Trip		Long press	Reset trip meter to zero	Trip meter						
Trip meter	Trip	Press		Shift to engine hour	Engine hour						
Engine hour	Engine hour	Press		Shift to dashboard brightness	Level of brightness						
Dashboard brightness	Dashboard brightness		Press	Adjust 5 levels of brightness	Dashboard brightness display						
Dashboard brightness	Dashboard brightness	Press		Shift to fault code display	Fault code						
Display fault code	Fault code	Press		Shift to odometer	Odometer						

Home Home Long Time setting interface Shift to time setting interface interface press Press Shift to time setting Time setting interface Add 1 hour for Hour setting interface Press Hour setting every press interface Long Hourly increase Hour setting interface press Time setting Time format setting Press Shift to time format setting interface Minute Press Add 1 minute for every press Minute setting interface setting interface Long Minutely increase Minute setting interface press Press Time format Shift to unit setting interface Unit setting interface Time format setting Press 12/24hr format shifting Set unit

Item	Display	SEL	ADJ	Operation	Result
		Press		Back to home interface	Home interface
Unit setting	Unit setting interface			Shift the unit (speed,	
Offic Setting	Offic Setting interface		Press	odometer, trip meter,	Unit setting interface
				average speed,)	
Time display	Time display		Press	Shift to instantaneous	Instantaneous fuel
Time display	Time display		1 1033	fuel consumption display	consumption
Instantaneous fuel	Instantaneous fuel		Press	Shift to average fuel	Average fuel
consumption	consumption		1 1033	consumption/100Km	consumption/100Km
Average fuel consumption/100Km	Average fuel consumption/100Km		Press	Shift to average speed	Average speed
Average speed	Average speed		Press	Shift to coolant temperature	Coolant temperature
Coolant temperature	Coolant temperature		Press	Shift to battery voltage	Battery voltage
Battery voltage	Battery voltage		Press	Shift to time display	Time display

INSTRUMENT (Adventure)

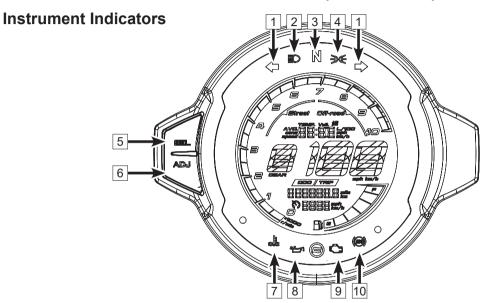

1	Turning signal indicator	4	Position light indicator		Coolant temp. warning indicator	10	ABS indicator
2	High beam indicator	5	SEL button	8	Oil pressure indicator		
3	Neutral indicator	6	ADJ button	9	Fault indicator		

Turning indicator-1

When turning light switch is in this position "\(\sigma\)", left turning signal indicator will flash.

When turning light switch is in this position "", right turning signal indicator will flash.

High beam indicator- 2

When the light switch is in this position "♣,", and the dimmer switch is in this position "€D", it will be on.

Neutral indicator- 3

When the vehicle gear is in neutral position, it will be on.

Position light indicator - 4

It will be on if the position light is turned on.

SEL button-5

To select the instrument functions. Use it together with ADJ button.

ADJ button-6

To adjust or set the instrument functions. Use together with SEL button.

Coolant temperature warning indicator- 7

It will flash when the coolant temperature is higher than 115°C.

Oil pressure indicator-8

When it is on, the oil level is very low, the oil pump cannot work properly or the oil pipeline is blocked. Stop the engine immediately and inspect for causes.

Fault indicator- 9

When the vehicle detects a fault in its circuit, it will be on.

ABS indicator- 10


If ABS works normally, it will flash when the vehicle is in parking state, and it will be off when it is in running state. If there is any fault, ABS indicator will keep on.

When the instrument displays Off-road model, long press the Off-road button(for 3 seconds), the rearwheel ABS is off and its indicator will flash(1Hz);

Shift to Street model or long press the OFF-road button(for 3 seconds), the rear-wheel ABS is on and its indicator is off.

NOTE: whenever the power is on, ABC is turned on by default.

Instrument Display

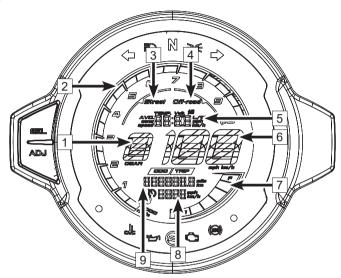

1	Gear display	4	Sport mode	7	Fuel display
2	Tachometer	5	Rider information center	8	Cruise control system display
3	Economic mode	6	Speed display	9	Odometer display

Gear display- 1

Displays the current vehicle's gear.

Tachometer- 2

Displays the engine rotating speed.

Economy mode-3

When the mode button is shifted to Eco mode, it will be displayed.

Sport mode- 4

When the mode button is shifted to Sport mode, "S mode" will be displayed.

Rider Information Center- 5

The rider information center displays several information categories: time, average speed, instantaneous fuel consumption, battery voltage and coolant temperature.

Speed display- 6

Displays the current vehicle's speed.

Fuel Display- 7

Displays the fuel quantity remained. When it flashes, the vehicle will use the reserve fuel of approximately 3.8L, which can support a journey of about 50km. Please arrange your travel properly and fill the fuel tank as soon as possible.

Range Display-9

Displays the total vehicle range, small range and fault codes. When there are multiple fault codes, the next one will be displayed every three seconds. When the fault codes are displayed, press SEL to return to the

total range display.

Cruise control system display- 8

The cruise control system display area displays the current selected target speed.

The cruise control system consists of a toggle switch and speed adjusting button for operation, located on the left handlebar' control switch. When the vehicle speed is between 24.8 (40) and 80.7mph (130Km/h), and the gear is between fourth (4th) and sixth (6th) gear, the cruise control system is available. Once activated, the throttle control does not require manual work, and the vehicle maintains the selected speed. The fastest speed can not exceed 80.7mph (130Km/h).

To activate cruise control system:

- Once the vehicle is operating at the designated speed and gear, toggle its switch to activate the cruise control function.
- Press "SET/-", the system will set the initial target speed according to the current speed and start cruising.
- Press 'RES/+' to increase the target speed by 1.2mph (2 Km/h).
- · Long press of the speed adjusting button to increases or decreases the target speed continuously.

To deactivate cruise control:

- · Any braking action, clutch action, or throttle action will deactivate the cruise control system.
- If at any time the actual vehicle speed reduces to less than 24.8mph (40 Km/h), the cruise control system function deactivates automatically.
- Using the control toggle switch or turning off the vehicle power will deactivate the cruise control
 completely.

↑ DANGER

To prevent accidental activation of cruise control, end cruise control when this function is not used.

Please ride the vehicle carefully when adjust the speed by the speed adjusting button.

Do not use cruise control in heavy traffic, sharp turns, winding roads, wet or icy roads, or on steep hills, as it may cause loss of control.

Riders are main operators of the motorcycle, and their control is prior to the cruise control system. When the motorcycle is cruising at a constant speed, control of the motorcycle is returned to riders when they use the brake and switch.

Cruise control is only a rider-assistant system, do not rely on it too much, always ride carefully.

Instrument Adjustments

ODO TRIP Mileage display area										
Item	Display	SEL	ADJ	Operation	Result					
Odometer	ODO	Press		Shift to trip meter	Trip meter					
Trip meter	Trip		Long press	Reset trip meter to zero	Trip meter					
Trip meter	Trip	Press		Shift to engine hour	Engine hour					
Engine hour	Engine hour	Press		Shift to dashboard brightness	Level of brightness					
Dashboard brightness	Dashboard brightness		Press	Adjust 5 levels of brightness	Dashboard brightness display					
Dashboard brightness	Dashboard brightness	Press		Shift to fault code display	Fault code					
Display fault code	Fault code	Press		Shift to odometer	Odometer					

AVG. CONS PRICE | AVG. CONS PR Long Time setting Home interface Home interface Shift to time setting interface press Time setting Press Shift to time setting interface Hour setting Add 1 hour for Hour setting Press interface interface every press Hour setting Long Hourly increase interface press Time setting Time format setting Press Shift to time format setting interface Minute setting Minute setting Press Add 1 minute for every press interface interface Minute setting Long Minutely increase interface press Time format Press Shift to unit setting interface Unit setting interface Time format setting 12/24hr format shifting Set Unit Press

Item	Display	SEL	ADJ	Operation	Result
		Press		Back to home interface	Home interface
Unit setting	Unit setting interface		Press	Shift the unit (speed, odometer, trip meter, average speed,)	Unit setting interface
Time display	Time display		Press	Shift to instantaneous fuel consumption display	Instantaneous fuel consumption
Instantaneous fuel consumption	Instantaneous fuel consumption		Press	Shift to average fuel consumption/100Km	Average fuel consumption/100Km
Average fuel consumption/100Km	Average fuel consumption/100Km		Press	Shift to average speed	Average speed
Average speed	Average speed		Press	Shift to coolant temperature	Coolant temperature
Coolant temperature	Coolant temperature		Press	Shift to battery voltage	Battery voltage
Battery voltage	Battery voltage		Press	Shift to time display	Time display

OPERATING YOUR VEHICLE

Break-in Period

The break-in period for this vehicle is 1000km. Maintain the vehicle according to the break-in period requirements.

The following regulations should be observed during break-in period:

- 1. Do not run the engine at high speeds immediately when the it is just started. Allow the engine to warm for $2 \sim 3$ minutes at idle speed and let the lubricant flow into all the engine' parts.
- 2. Do not run the engine at high Rpm when the vehicle is in neutral gear.
- 3. During the break-in period, CFMOTO suggests the top engine speeds as below:

Odometer	Maximum engine RPM
0 km ~ 500 km	4000 r/min
500 km ~ 1000 km	6000 r/min

ADANGER

New tires are slippery and can cause loss of control and injury. The specified tire pressure must be guaranteed during 1000 km break-in period. During the break-in period, avoid sudden or hard, sudden acceleration or sharp turns.

Daily Safety Inspection

Inspecting the following items before daily riding will help keep your vehicle in safe and reliable. If anything appears abnormal, please refer to the Maintenance and Adjustment section or contact your dealer. Do not operate the vehicle in an abnormal condition, as it may lead to serious damage or accidents.

Item	Content
Coolant	Inspect the coolant level to see whether it is proper.
Engine oil	Inspect the oil level to see whether it is proper.
Rear brake fluid	Inspect the rear brake fluid level to see whether it is proper.
reservoir	
Rear wheel	Inspect the rear wheel and tire for excessive wear, cracks or cuts, embedded items or
	other damage. Inspect whether rear tire pressure is within the standard range.
Rear brake	Inspect the thickness of rear brake pad. Inspect thickness of rear brake disc and
	inspect for any dirt or damage.
Chain and	Inspect the drive chain and sprockets for dirt and wear, and inspect their tension to
Sprockets	see whether it is proper.
Front wheel	Inspect the front wheel and tire for excessive wear, cracks or cuts, embedded items
	or other damage. Inspect the front tire pressure to see whether is within the standard
	range.
Front brake	Inspect the thickness of front brake pad. Inspect thickness of front brake disc and
	inspect for any dirt or damage.

Front brake fluid reservoir	Inspect the front brake fluid level to see whether it is proper.
Luggage	Inspect the luggage to see whether it is fastened securely, and make sure the luggage height is in line with local regulations.
Instrument	Inspect the instrument's fault indicators and inspect the fuel to see whether the fuel is enough.
Rear-view mirrors	Inspect the rear view mirrors to see whether they are in an appropriate view angle.
Lights	Inspect all the lights to see whether they all work well and whether the beam height for front lights meets the local regulations.
Operating parts	Inspect the handlebar, steering, front and rear brakes, throttle and switches to see whether they can be operated smoothly.
Side stand /center	Inspect the return spring of the side stand for any looseness or damage.
supporter	
Stop switch	Inspect the stop switch to see whether it works properly.

↑ DANGER

Inspect the vehicle every time before riding.

The operator must have the related driver's license to ride the vehicle.

Learn the local regulations, and do not ride the vehicle in the areas where motorcycles are not allowed.

Do not start the vehicle in a closed area or an area without a good ventilation system. The exhaust generated during engine operation may cause people to lose consciousness or even cause deaths.

Starting

Sit on the vehicle supported with the side stand;

Turn on the ignition switch;

Place the gear in Neutral;

Turn the stop switch to position "(3)";

Press the start button.

ACAUTION

Engine running at high RPMs in low temperatures will impact the lifespan of engine. Always warm the engine at a low speed.

Before the instrument self-inspection, do not start the vehicle with the start switch.

The vehicle is equipped with a clutch switch. Pull the clutch lever and shift into a forward gear with the side stand up, the vehicle can be started.

The vehicle is equipped with a side stand switch. When the gear is in Neutral position with the side stand up, the vehicle can be started.

If shifting into a gear with the side stand down, the engine will turn off.

Do not press the start switch for more than five (5) seconds. Please wait for more than 15 seconds to press the start switch again, or it will cause the battery to discharge.

Starting Off

Grip the clutch lever, shift the gearshift lever downward for gear 1, then slowly release the clutch lever while at the same time gently tighten the throttle.

Shifting, Riding

Grip the clutch lever and release the throttle.

Shift the gearshift lever upward for gears 2,3,4,5,6 (as required).

Release the clutch lever and slowly tighten the throttle at the same time to complete the gear shift.

Hold the handlebar at all times with both hands when driving with the throttle tightened.

AWARNING

Avoid any abrupt load alterations or strong brake operation, which can cause the vehicle loss of control.

Adjust the speed according to road conditions and situation around you.

When the engine RPM is high, do not shift into lower gears. Release the throttle first and reduce the engine speed.

All adjustments for vehicle operation should be made when vehicle is being parked.

The passenger must be seated properly on the passenger seat with feet on the rear foot pedals, wearing a helmet and with other safety protection, and holding onto the operator or grab the handle.

Comply with the local traffic regulations for minimum passenger age.

Comply with all local traffic regulations, ride preventively and cautiously to detect any danger as early as possible.

When the tires are in a low temperature, their road grip performance is reduced. Be cautious and ride at an average speed until the tires are at their available temperature.

Do not exceed the maximum full load, which includes the motorcycle, driver, passenger and luggage.

↑WARNING

Luggage sliding will affect the riding performance, inspect the luggage to see whether it is fixed tightly on the vehicle, and to ensure that the width does not exceed 0.15m from the handlebar for both left and right sides.

In the event of an accident, the damage from crashing could be more serious than it looks. Inspect the vehicle completely to make sure it is safe, or take the vehicle to a CFMOTO dealer for inspection.

Improper gear shifting may lead to damage of the gear box.

Tighten the throttle according to the road conditions and climate. Do not shift gears and be cautious to tighten the throttle especially during turnings.

Brake

Release the throttle when applying the brake, and use front and rear wheel brakes for braking at the same time.

Finish braking before turning, and shift to a lower gear according to the speed required.

On a long downhill ride, please leverage the brake force of the engine and shift to lower gears, but do not allow the engine to operate with high RPM. When using engine's brake force, it helps to reduce the braking force required of the brake system, and the brake will not be overheated.

↑WARNING

Moisture and dirt will impair the brake system. Brake carefully several times to dry out moisture and remove dirt from the brake pads and discs.

If the hand brake lever and foot brake lever feel soft, stop riding until the brake system is fully inspected and the faults eliminated.

Take your foot off the foot brake lever when you are not braking. Long-time braking will cause brake pads overheating and excessive wear, which will affect service life and safety.

When carrying a passenger or luggage, the required braking distance will be increased. Please adjust the brake time according to the vehicle load.

When the ABS is used, you can achieve maximum braking power even on low grip surfaces such as sandy, wet or slippery roads with no risk of locking of the wheels.

Parking

Stop the vehicle with brake.

Shift the gear to Neutral.

Turn off the ignition switch.

Park the vehicle on a firm, level ground.

Use side stand to support the vehicle.

Turn the handlebar left to the maximum, and lock the steering with the key.

Remove and take away the key.

↑WARNING

When engine is running, do not leave the vehicle unattended.

Secure the vehicle against use by unauthorized persons.

Lock the steering when leaving the vehicle unattended.

After running the vehicle, its temperature will be very high for some parts. Do not touch any parts such as the exhaust system, cooling system, engine, or brake system.

Do not park the vehicle near materials that are highly flammable or explosive. High temperature parts may ignite the materials.

Improper parking operation may cause vehicle to slip and roll over, which will lead to severe damages.

SAFETY OPERATION

Safe Riding Tips

The following items are applicable for daily motorcycle use and should be carefully observed for safe and effective vehicle operation:

For safety, goggles and a helmet are strongly recommended. You must be aware of traffic regulations for the safe riding. Safe riding gear such as gloves and suitable footwear should also be used for protection.

Wear protective apparel when riding in case of any collision with other vehicles. Without protective apparel, no safety can be ensured. Before changing lanes, look over your shoulder to make sure the way is safe. Do not rely solely on the rear-view mirrors. You must judge distance and speed of other cycles, or accidents may occur.

When climbing up steep slopes, shift to a lower gear to increase the motor's torque output, thus avoiding overloading.

When applying the brakes, apply both the front and rear brakes at the same time. Applying only one brake for sudden braking may cause the motorcycle to skid and lose control.

When going down long downhill slopes, control vehicle speed by releasing the throttle. Use the front and rear brakes for auxiliary braking.

In wet conditions, rely more on the throttle to control vehicle speed and less on the front and rear brakes. The throttle should also be used judiciously to avoid skidding the rear wheel during rapid acceleration or deceleration.

Riding at the proper speed and avoiding unnecessary acceleration are important not only for safety and low fuel consumption, but also for longer vehicle life and guieter operation.

When riding in wet conditions or on loose roadway surfaces, vehicle performance will be reduced. All of your actions should be smooth and flexible under these conditions. Sudden acceleration, braking or turning may cause loss of control.

Practice your operating skills cautiously and slowly in an open area and hold the fuel tank with the knees for better stability. When there is a quick acceleration, shift to a lower gear to obtain the necessary power.

Do not downshift at high rpm to avoid damage to the engine.

Avoid unnecessary use of fabric tape which may entangle the rider or motorcycle.

Additional Cautions for High Speed Operation

Brakes: Braking is very important, especially during high speed riding and the braking force cannot be too large. Inspect and adjust the brakes to get better performance.

Handling: Looseness of the handling parts may cause loss of control. Inspect the steering to see whether it can turn freely without shaking.

Tires: High speed operation requires the tires to be in good condition. Good-condition tires are crucial for safe riding. Inspect their pressure and the wheel balance.

Fuel: To ensure that there is enough fuel and a smooth supply of fuel for high speed operation.

Oil: To avoid engine failures which could result in loss of control, make sure the oil level is maintained between the upper and lower level lines.

Coolant: To avoid overheating, check and make sure that the coolant level is between the two level lines.

Electrical Equipment: Make sure that the headlights, tail/brake light, turn signals, horn and etc. work properly.

Fasteners: Make sure that all nuts and bolts are tight and that all safety-related parts are in good condition.

⚠DANGER

Do not speed on expressways and obey the relevant laws and regulations. Electric motorcycles are banned on expressways in some parts unless they are approved by traffic authorities and have the relevant skills and protection conditions.

MAINTENANCE

Careful and periodic maintenance will help keep your vehicle in the safest, most reliable condition. Inspection, adjustment, and lubrication of important components are explained in the Periodic Maintenance Chart.

Inspect, clean, lubricate, adjust, and replace parts as necessary. When inspection reveals the need for replacement of certain parts, always use original parts from your dealer.

MOTE

Periodic maintenance and adjustments are critical. If you are not familiar with relative procedures, have a qualified dealer do that for you.

Pay special attention to the oil level during cold weather operation. A rise in oil level can indicate that there are contaminants collecting in the oil sump or crankcase. Change oil immediately if the oil level begins to rise. Monitor the oil level, and if it continues to rise, stop using the vehicle and inspect for reasons or see your dealer.

Improper Use

CFMOTO defines improper use of the vehicle as:

- Often immersed in mud, watery or sandy places.
- · Racing or race-style use of high RPM.
- Running at low speed for a long time, and carry heavy load.
- · Idle the engine for a long time.
- · Short-distance operation in a cold weather.
- · For commercial use.

If this vehicle is used in a way that matches any of these definitions, decrease the maintenance intervals by 50%.

Key Points of Lubrication Schedule:

Check all components at the intervals outlined in the Periodic Maintenance Chart. Items not listed in the schedule should be lubricated at the general lubrication interval.

- Change lubricants more often under severe conditions, such as being used in wet or dusty conditions.
- Lubricate before long periods of storage, after pressure washing, or after submerging drive system.

Item	Specifications	Method
	First choice: SAE 10W-40 SJ JASO MA2	
	Second choices:SAE 10W-30 SJ / SAE 10W-50 SJ / SAE 20W-40 SJ / SAE 20W-	
	50 SJ JASO MA2	
Brake fluid	DOT3 or DOT4	Keep the level between upper and
Diake lidid	DO 13 01 DO 14	lower lines.

Break-in Periodic Maintenance Chart

Item	Break-in Maintenance Interval (Maintain the item that reached the interval first)					
1	Hour Month Km			Notes		
Engine						
■ Oil and oil filter	-	-	1000	Replace.		
■ Coarse oil filter	-	-	1000	Clean.		
Idle	-	-	1000			
■ Coolant	-	-	1000	Inspect.		
Throttle system	-	-	1000			
Electrical system						
■ Functions of electrical parts	-	-	1000			
Battery	-	-	1000	Inspect.		
Fuses or circuit breakers	-	-	1000			
Brake						
Brake discs	-	-	1000			
Brake pads	-	-	1000	Inspect.		
Brake fluid level	-	-	1000			
■ Brake hoses	-	-	1000	Inspect brake hoses for damage and to see whether they are sealed.		
Brake lever	-	-	1000	Inspect free play.		

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

Item		Break-in Maintenance Interval (Maintain the item that reaches the interval first)			
		Hour	Month	Km	Notes
Whee	ls				
	Tire condition	-	-	1000	Inchest
	Tire pressure	-	-	1000	Inspect.
Susp	ension				
•	Rear and front shock absorbers	-	-	1000	Inspect for oil leakage(maintain front forks and the rear shock absorber according to the requirement and purpose).
Cooli	ng system				
	Coolant level	-	-	1000	
	Coolant	-	-	1000	Inchest
	Radiator fan function	-	-	1000	Inspect.
	Coolant hoses	-	-	1000	
Steer	ing system				
	Steering bearings	-	-	1000	Inspect.

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

Item		Break-in Maintenance Interval (Maintain the item that reached the interval first)			
		Hour	Month	Km	Notes
Other	parts				
	Fault control memory	-	-	1000	Read with PDA.
•	Movable parts	-	-	1000	Lubricate, and inspect their flexibility.
•	Bolts and nuts	-	-	1000	Inspect their firmness.
•	Cables	-	-	1000	Inspect them for damage, bending and inspect their setting.

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

After Break-in Periodic Maintenance Chart

Item		After Break-in Maintenance Interval (Maintain the item that reaches the interval first)				
			Month	Km	Notes	
Engine						
	Oil and oil filter	-	6M	5000	Replace.	
	Coarse oil filter	-	6M	5000	Clean.	
•	Clutch	-	-	5000	luonost	
	Idle	-	-	10000	Inspect.	
-	Coolant	-	24M	35000	Replace.	
	Throttle	-	-	5000	Inspect.	
•	Throttle body	-	-	5000	Clean.	
_	A in filt on a lama arts	-	-	5000	Clean.	
▲ ■ Air filter elements	-	24M	20000	Replace.		
■ Spark plug	-	-	5000	Inspect.		
	Spark plug	-	-	10000	Replace.	
	Valve clearance	-		40000	Inspect.	

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

	Mana.		After Break-in Maintenance Interval				
	ltem	(Maintain the item that reaches the interval first)					
			Month	Km	Notes		
Electr	rical system						
	Functions of electrical parts	-	12M	10000			
	Battery	-	6M	5000	Inspect.		
	Fuses or circuit breakers	-	6M	5000			
•	Cables	-	12M	10000	Inspect for any damage and bending when they are being set.		
Whee	ls						
	Wheel condition	-	12M	10000			
	Writeer Condition	-	24M	20000			
	Wheel pressure	-	12M	10000	Inonact		
		-	24M	20000	Inspect.		
	VA/Is a a Life a primary	-	-	10000			
	Wheel bearings	-	-	30000			

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

	ltem		After Break-in Maintenance Interval (Maintain the item that reaches the interval first)			
			Month	Km	Notes	
Brake		,				
	Front and roor broking avetome	-	12M	10000		
	Front and rear braking systems	-	24M	20000		
	Proko diago	-	12M	10000]	
	Brake discs	-	24M	20000	Inonest	
	Brake pads	-	12M	10000	Inspect.	
		-	24M	20000		
	Brake fluid level	-	12M	10000]	
	brake iluid level	-	-	20000]	
		-	24M	20000	Inspect them to	
	Brake hoses				see whether they	
	Diake 1103e5	-	12M	10000	are damaged and	
					sealed.	
	Brake pedals	-	24M	20000	Inspect free play.	
		-	12M	10000	inspectifiee play.	
-	Brake fluid		24M	-	Replace.	

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

	Item		After Break-in Maintenance Interval (Maintain the item that reaches the interval first)			
		Hour	Month	Km	Notes	
Suspe	ension					
-	Suspension system	-	-	10000	Inspect.	
	■ Front and rear shock absorbers	-	12M	10000	Inspect for oil leakage(maintain	
•		-	24M	20000	front forks and rear shock absorber according to the requirement and purpose).	
_	Swing orm	-	-	10000	Inopost	
•	Swing arm	-	-	30000	Inspect.	
Frame)			•		
	Frame	-	-	30000	Inspect.	
Steeri	ng system		•			
_	Other sites at Leasting and	-	12M	10000	Inapact	
	Steering bearings	-	24M	20000	Inspect.	

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

ltem		After Break-in Maintenance Interval (Maintain the item that reaches the interval first)			
		Hour	Month	Km	Notes
Cooli	ng system				
		-	12M	10000	
	Coolant level	-	24M	20000	
	■ Coolant	-	12M	10000	
•		-	24M	20000	lmanaat
	Radiator fan function	-	12M	10000	Inspect.
•		-	24M	20000	
	Caaling bases	-	12M	10000	
•	Cooling hoses	-	48M	30000	
Sprocket and chain					
	Chain, rear sprocket and engine	-	12M	10000	lu au a at
•	sprocket	-	24M	20000	Inspect.

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

	Item		After Break-in Maintenance Interval (Maintain the item that reaches the interval first)			
			Month	Km	Notes	
Other	parts					
	Fault central memory	-	12M	10000	Read with PDA.	
-	Fault control memory	-	24M	20000	Read with PDA.	
	■ Movable parts	-	12M	10000	Lubricate, and	
•		-	48M	30000	inspect their flexibility.	
	Dalta and note	-	12M	10000	Inspect their	
•	Bolts and nuts	-	48M	30000	firmness.	
		-	12M	5000	Inspect them for	
•	Cables	-	24M	15000	damage, bending and inspect their setting.	
		-	12M	10000	Inspect them to see whether they have	
•	Pipes, ducts, hoses and sleeves	-	48M	30000	cracks, are sealed and set corrected.	

^{▲ =} The maintenance interval is shortened by 50% if the motorcycle is used badly.

^{■ =} Have an authorized dealer repair involved components and systems.

CLUTCH LEVER FREE-PLAY

Inspect the flexibility of the clutch lever.

Turn handlebar left to the maximum.

Slowly apply the clutch lever until the resistance is evident. Check the free-play distance of the clutch lever is within the following range.

Free-play: 0.39 in ~ 0.78 in (10 mm ~ 20 mm)

↑ WARNING

If there is no free play for clutch lever, the clutch will start to slip.

Inspect the free-play every time before running the engine.


Set the free-play as stipulated when necessary.

Fine adjustment of clutch lever free-play

Loosen lock nut 1;

Rotate the adjusting nut 2 for adjustment;

Tighten the lock nut 1.

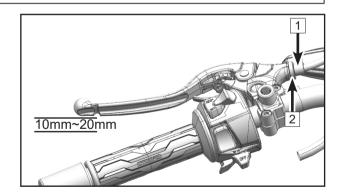


TOOL KIT

7700 CL-X Heritage:Tool kit is under the cushion.

700 CL-X Adventure: Tool kit is in the battery package case.

Tool kit can help maintain and disassemble some parts of the vehicle.

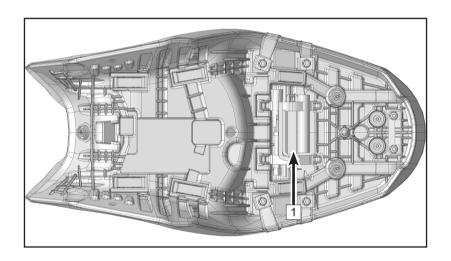

FUEL SYSTEM

Fuel Tank

Avoid spilling fuel to the outside of the fuel tank when filling. If a spill occurs, wipe it off immediately to avoid pollution or causing danger.

Fuel tank volume: 3.434gal (13 L).

⚠DANGER

Gasoline is flammable, so the fuel should be filled in a ventilated area. Before refueling, turn off the engine and wait for the engine and muffler to cool. No smoking or any acts that cause sparks are allowed in the fuel filling area or fuel storage area.

Never fill the tank excessively. Avoid the fuel from overflowing onto high-temperature parts. The fuel level should not exceed the tank opening. As temperature rises, fuel can heat and expand, and then may spill over and damage motorcycle parts.

Fuel is toxic and harmful to health. Avoid touching the skin, eyes and clothes. Do not inhale fuel vapor.

If the fuel touches the skin, wash the skin with plenty of clean water.

If the fuel touches the eyes, wash eyes immediately with clean water and see a doctor immediately.

If the fuel touches the clothes, change the clothes immediately.

If the fuel is swallowed by mistake, see a doctor immediately.

After maintenance or other disassembling behaviors of parts of the fuel system, please contact your dealer for complete inspection to avoid fuel leaks or other dangers.

Dispose of the fuel properly to avoid damage to the environment.

Fuel Requirements

This motorcycle is recommended to use only unleaded gasoline(#95 or higher).

ACAUTION

Do not use leaded gasoline, as it will destroy the catalytic converter. (For further understanding, please consult related materials about the catalytic converter)

Be sure to use fresh gasoline. Gasoline oxidation will result in loss of octane and volatile compounds. It also produces colloidal and lacquer deposits which could damage the fuel system.

Octane Rating (RON)

'RON' is a technical term commonly used to describe the octane rating of gasoline. The higher the number RON, the greater the resistance to knocking and detonation. Always use unleaded gasoline with an octane rating equal to #95 or higher.

∴CAUTION

If the engine has a knocking cylinder or detonation, use a unleaded gasoline of higher quality or higher RON.

ENGINE ASSY

For the engine, transmission, clutch and other parts to work properly, make sure that the oil level is between the upper and lower lines from the oil view window, and check and replace the oil according to the Periodic Maintenance Chart. Long-time lubrication will not only produce dirt and metallic impurities, but also consume itself.

ADANGER

Riding the motorcycle with insufficient, deteriorated or highly contaminated oil will cause accelerated wear and may result in engine or transmission's melting and bonding, accident, and injury.

Oil Level Inspection

Make sure the vehicle is turned off.


If the running was operated prior to turning off, please wait for 2 to 3 minutes for the oil to settle.

Support the vehicle vertically on a level surface, and then view the oil level inspection window:

If the oil level is at area B, it is at the proper level;

If the oil level is at area A, drain out the oil until the level is within area B;

If the oil level is at area C, or no oil level can be viewed, fill the engine with the recommended oil until the level is within area B.

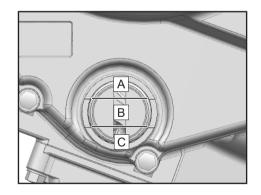

Oil and Oil Filter Replacement

Park the vehicle by on the level ground;

Idle the engine for several minutes to warm up the engine, then turn off the engine;


AWARNING

Warming up the engine for a long period may lead to high temperature of the engine and oil. Please wear suitable protective clothing and gloves when changing oil. In the event of scalding, wash the scaled area immediately with running water for more than 10 minutes until feeling no pain and see a doctor.



Remove the magnetic oil drain bolt and washer 1;

Drain out completely the used oil;

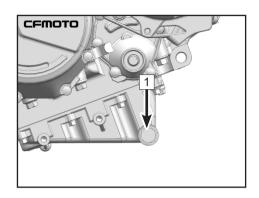

∴WARNING

Oil is a toxic substance, so the used oil should be disposed of properly.

Remove the oil filter 2 and replace the old oil filter with a new one;

Mount the new oil filter;


ACAUTION

Before mounting the oil filter, applying a thin layer of oil on the seal ring.

Clean the oil drain bolt and the area around the oil drain hole.

Place a new washer on the oil drain bolt, then remount the oil drain bolt and washer.

Tightening torque: 25 N·m

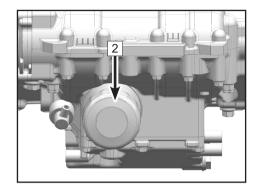

Remove the oil filler screw plug 3;


Fill with 2.32 qt (2.2 L) oil of SAE10W/40 SJ, JASOMA2;

Remount the oil filler screw plug;

Idle the engine for several minutes, allowing the oil to flow into the oil filter;

Turn off the engine;

Inspect the oil level and adjust it according to the real level.

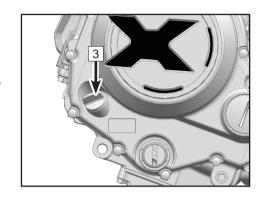


Oil Capacity

Replace oil filter: 2.32 qt (2.2 L).

CFMOTO recommends the kind of oil with APISH or higher, with JASO-MA2 as the primary choice and JASO-MA as an acceptable alternative.

Although 10W-40 oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area. Please choose oil viscosity according to the chart.

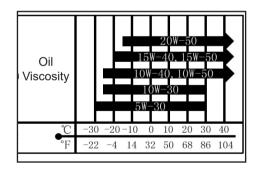

Spark Plug

The spark plug should be replaced in accordance with the Periodic Maintenance Chart.


Its disassembly should only be performed by an authorized dealer.

Spark plug type: CR8EI.

Spark plug clearance: 0.027 in ~ 0.035 in (0.7mm~0.9mm).

Tightening torque: 18 N•m


18 N•m

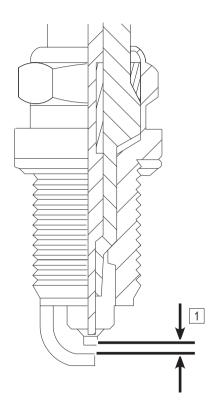

AIR INTAKE AND EXHAUST SYSTEM

Exhaust Detecting System

Exhaust detecting system depends on two oxygen sensors 1 mounted on exhaust pipes, and they can detect the air & fuel combustion degree by measuring oxygen density and transferring it as an electrical signal to the ECU. If the ECU thinks that combustion is not thorough, it will adjust fuel injection in accordance with signals from the Throttle Position Sensor and Intake Air Temperature sensors. By this way, the ratio of air to fuel can be optimized for thorough combustion.

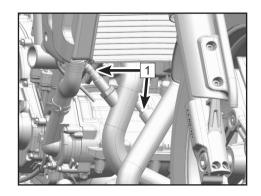

Air Intake Valve

An air intake valve is a valve which allows fresh air to flow only from the air filter into the engine. Any air that passes through the air intake valve is prevented from returning. Have a dealer inspect the air intake valves in accordance with the Periodic Maintenance Chart. Also, have the air intake valves inspected whenever stable idling cannot be performed stably, engine power is greatly reduced, or there are abnormal engine noises. Air intake valve removal and inspection should only be performed by an authorized CFMOTO dealer.

Valve Clearance

The valves and valve seats will wear during operation, thus the need for adjustment.


↑ WARNING

When valves and valve seat tappets are wore during use, and if adjustment of the valve clearance is not performed, it will eventually result in no clearance or cause the valves remaining partly open, which reduces performance, creates valve noise, and can cause serious engine damage. Valve clearance for each valve should be inspected and adjusted in accordance with the Periodic Maintenance Chart. Inspection and adjustment should be performed by a CFMOTO dealer.

Air Filter

A clogged air filter restricts air flow, increases fuel consumption, reduces engine performance, and causes spark plug to be flooded by the oil. The air filter element must be cleaned in accordance with the periodic Maintenance Chart. When riding in dusty, rainy, or muddy conditions, the air filter element should be maintained by an authorized dealer more frequently than the recommended in the periodic Maintenance Chart.

An air filter drain hose 1 is located at the left side of engine cylinder.

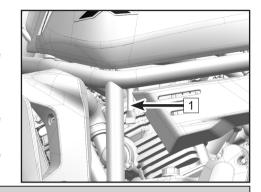

ACAUTION

Oil on tires and plastic or other parts will cause damage.

If engine intakes the unfiltered air, it will suffer from a negative effect on its service life.

Never start to use the vehicle without an air filter.

Throttle Body

The stop screws on the throttle body have been set precisely and can not be adjusted. Inspect the vehicle to see whether its idling is stable, and if the idling is not stable, please ask CFMOTO to assign professional technicians to deal with this problem.

COOLING SYSTEM

Radiator and Cooling Fan

Inspect the radiator fins for deformation and obstruction by mud, and clean off any obstruction with clean water.

↑WARNING

When the fan is working, prevent your hands and clothing from getting inside the fan to avoid any injury.

Using high-pressure water to clean the vehicle could damage the radiator fins and reduce the radiator's effectiveness.

Mounting unauthorized accessories in front of the radiator or behind the cooling fan may obstruct or change the radiator airflow, and can lead to overheating and damage.

If the radiator pipe is obstructed more than 20% by irremovable obstructions or irreparable deformed fins, then replace it with a new radiator.

Radiator Hoses

Inspect the radiator hoses for leaks, cracks, aging, rust, corrosion and connections for leaks or looseness daily before riding the motorcycle. Inspect the vehicle in accordance with the Periodic Maintenance Chart.

Coolant

Coolant absorbs heat from the engine and transfers it to the air by the radiator. If the coolant level is too low, the engine will overheat and may suffer from severe damages. Inspect the coolant level daily before riding the motorcycle and perform maintenance in accordance with the Periodic Maintenance Chart. Replenish the coolant if its level is too low.

To protect the cooling system (engine and radiator are made of aluminum) from rust and corrosion, the use of anti-corrosion and anti-rust chemicals in the coolant is essential. If the coolant has already these chemicals, there is no need to add them separately.

<u>∧</u>DANGER

Coolant is toxic and harmful to health.

Do not allow the coolant to touch skin, eyes or clothing.

If coolant is swallowed, see a doctor immediately.

If coolant touches the skin, flush the skin with plenty of clean water immediately.

If coolant touches the eyes, flush the eyes with plenty of clean water and see a doctor immediately.

If coolant splashes on clothes, change the clothes and wash them immediately.

Any corrosion or rust remains from the engine and radiator should be disposed of by special instructions, because the chemicals inside are harmful to the human body.

ACAUTION

Do not add tap water to the coolant system, for it will cause deposit inside the cooling system. When the temperature is below 0°C, ice will occur and severely affect the coolant system.

Available bottled antifreeze in the market contains anti-corrosion and anti-rust chemicals. When it is diluted, it loses its anti-corrosion and anti-rust function. Keep the diluted concentration of antifreeze the same as the instructions from the manufacturer.

When replenishing the coolant which color is green and contains ethylene glycol. When the environment temperature is below -31°F (-35°C), please ensure the coolant has a freezing point below -31°F (-35°C).

Coolant Level Inspection

Park the vehicle with the side stand on level ground; Inspect the coolant level in the reservoir;

If it is at area 'B': The coolant is at the proper level;

If the level is at area 'A': Drain out the redundant coolant until it is at area 'B';


If the level is at area 'C' or cannot be seen: Replenish it with the same coolant until the level is at area 'B'.

↑ WARNING

When the vehicle is running, the coolant will have a very high temperature and stay in a state of compression.

Before the engine or cooling system has cooled down completely, do not open the radiator, radiator hoses, reservoir or other cooling-related parts.

In the event of scalding, wash the scaled area immediately with running water for more than 10 minutes until the pain can not be felt and see a doctor.

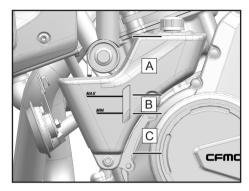

Coolant Replenishment

Open the reservoir cover and replenish coolant to area B.

ACAUTION

If coolant needs to be replenished frequently, or the reservoir is completely dry, there is probably a leak in the system. Have the cooling system inspected by an authorized dealer.

It is only recommended to use CFMOTO original coolant, the mix of different coolants may cause engine damages, contact your dealer to replace the coolant.

TIRES AND CHAINS

This vehicle only uses tubeless tires, rims and inflating valves. Only use the recommended standard tires, rims and inflating valves. Do not mount inner tube tires on tubeless rims. Do not mount an inner tube inside a tubeless tire.

Tire Specifications

		Heritage	Adventure		
Tire specifications	Front wheel	110/80 R18	110/80 R18		
The specifications	Rear wheel	180/55 R17	170/60 R17		
Tire proceure	Front wheel	250 kPa			
Tire pressure	Rear wheel	280 kPa			
Minimum tread depth		0.8 mm ~ 1 mm			
wiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiiii	Rear wheel	0.8 mm ~ 1 mm			

Improper tire pressure or exceeding the tire load limit may affect the vehicle handling and performance, causing a loss of control.

Make periodic inspections on the tire pressure by a tire pressure gauge and adjust tire pressure accordingly.

Too-low tire pressure may cause the tire improper wear or overheating.

Proper tire pressure offers the best comfort and the longest service life.

NOTE:

Inspect the tire pressure when the tires are cold.

Tire pressure is affected by the change of environment temperature and altitude. If the environment temperature and altitude have a big change during riding, tire pressure should be adjusted and inspected accordingly.

Most countries have their own regulation of minimum tread depth. Please follow local regulations. When mounting new rims or tires, always inspect the wheel balance of the tires.

ACAUTION

In order to keep safe and stable operation, please only use the tire and pressure recommended. If the tire is punctured and repaired, please do not ride the vehicle at over 100km/h until 24hours after, and the speed cannot exceed 130 km/h at any other time.

The front and rear tires should come from the same manufacturer, with the same tread pattern.

New tires can be slippery and may cause a loss of control and injury. Please drive the vehicle in proper ways and use different tilt angles to have the tires create friction with the ground over the entire surface. Normal friction surface will be formed after a 160km break-in period. Avoid sudden braking, heavy acceleration, and high speed sharp turns during the break-in period.

Tire Friction

When tire tread wears too severely and the tire cannot be used, the tire becomes more susceptible to punctures and failures. An accepted estimate is that 90% of all tire failures occur during the last 10% of tire service life, so it is unsafe to continue to use bald tires. In accordance with the Periodic Maintenance Chart, measure the depth of the tread with a depth gauge, and replace any tire that has been worn down to the minimum allowable tread depth.

Visually inspect the tire tread for cracks and cuts, and replace it with a new tire if it is severely damaged. For example, if partial expansion appears on the tire, it means the tire is broken.

Remove any embedded stones or other foreign particles form the tread.

ACAUTION

When the environment temperature is below 14°F (-10°C), it is recommended to place the vehicle indoors if required to be stored for a long time.

Do not use side stand to park the vehicle for long time in winter. Use the middle stand (if equipped) or rear-wheel stand to park the vehicle, to let the tires be free of the wheel weight.

Do not allow the tires to sink into snow or ice for a long time when parking the vehicle in winter.

When parking the vehicle for a long time outside in winter, it is recommended to put objects that can preserve the heat such as branches, paper or sand under the tires.


Spokes and Rims Repair (Adventure)

The vehicle adopts straight-pull mesh spokes and rims, which have the advantages of good toughness, strong elasticity, impact resistance, light weight and low resistance.

The inspection of spokes and rims mainly focuses on the state of spokes and the distortion of rims.

Tight spokes give a clear ring when being struck, while loose spokes sound flat. The adjustment of spokes should be carried out by professional technicians. If the spokes are loose, contact the after-sales center authorized by CFMOTO for repair; bent or damaged spokes need to be replaced, and the entire rim too, if necessary.

Normal rims will not jump or distort during riding. If such a situation occurs, the rim can be corrected by adjusting the spokes. If necessary, the whole rim can be replaced and the after-sales center authorized by CFMOTO can be contacted for maintenance.

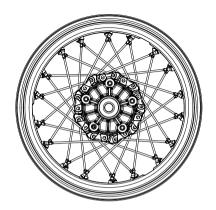

Drive Chain Inspection

The looseness and lubrication of the drive chain must be inspected daily before riding and safety cautions in the Periodic Maintenance Chart must be observed to prevent excessive wear. If the chain becomes badly worn or maladjusted, it will cause the chain to be to too loose or too tight.

If the chain is too tight, it will accelerate the wear to the chain, sprocket, rear sprocket and rear rim. Some parts may crack or break when the vehicle is overload.

If the chain is too loose, the chain may fall off from the sprocket or rear sprocket, which may cause locking of the rear wheel or damages to engine.

The service life of the drive chain largely depends on the maintenance.

Chain dirt inspection

Inspect periodically or inspect the chain for dirt after driving in severe conditions.

If the chain is extremely dirty, flush any large dirt particles with a soft flow of water. Clean any residual dirt and residual lubricant with a proper chain cleaner.

Spray the chain with a proper chain lubricant after the chain is dry.

↑ WARNING

When spraying chain lubricant, do not splash the lubricant onto other parts. Lubricant on the tires will decrease the tire grip, and lubricant on the brake discs will decrease the brake performance. Clean these components with a proper cleaner if the over-spray occurs.

Chain tension inspection

Shift the gear into Neutral;

Park with the side stand;

Push up the chain to inspect its tension;

If the chain tension is not in line with relevant specifications, then adjust it to the standard

Standard value: 0.79in~1.18in (20 mm ~ 30 mm)

NOTE:

The wear of the chain is not always uniform, and the tension should be repeatedly measured by rotating the rear wheel several times in different positions.

Drive Chain Tension Adjustment

Loosen the rear wheel shaft nut 1;


Loosen the left and right locking nuts 3;


Screw the left and right adjusting bolts 2 to adjust the chain tension, ensuring the alignment marks on the left and right chain tensioners are the same with the reference mark position;

Make sure the tensioners 4 are close to the adjusting bolt;

Tighten the left and right locking nuts 3;

Tighten the rear wheel shaft nut.

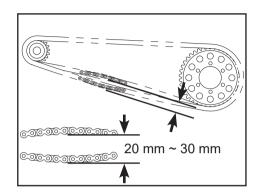

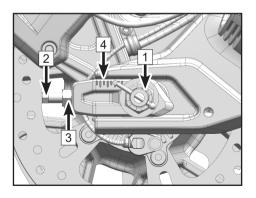

Wear inspection

Shift the gear into Neutral;

Support the vehicle with the side stand.

Apply chain tensioning or hanging a 22 lb (10 kg) object on the chain.

Measure the elongated length between 20 links;

If the measured length exceeds the standard limit, replace the chain with a new one;


Standard limit: 12.6in (320.7mm).


↑ DANGER

For your safety, please use the standard chain. When the chain is elongated, never cut the chain and use it again. Have it replaced by an authorized CFMOTO dealer.

Inspect the rear sprocket and engine sprocket tooth surface for any kind of wear.

If the engine sprocket or rear sprocket is worn, then replace the whole set of the transmission.

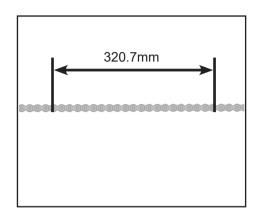

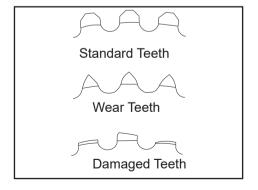

BRAKE SYSTEM

In order to guarantee excellent performance of your vehicle and personal safety, please inspect and maintain the vehicle according to the Periodic Maintenance Chart. Make sure all the parts of the brake system are in a good state. If any damage occurs to the brake system, please stop riding and have your

vehicle inspected and maintained by an authorized dealer.

Front Brake Lever Inspection

Park the vehicle with the side stand on level ground; Grip lightly the front brake lever and inspect its free travel.

Free travel: 0.39in~0.59in (10m~15mm)


Inspect the front brake lever for any cracks or abnormal noise; If these problems occur, replace the front lever with a new one.

Rear Brake Pedal Inspection

Park the vehicle with the side stand on level ground; Lightly grip the rear brake pedal and inspect its free travel.

Free travel: 0.39in~0.59in (10m~15mm)

Inspect the rear brake pedal for any cracks or abnormal noise; If these problems occur, replace the rear lever with a new one.

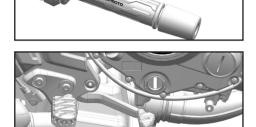

10mm~15mm

10mm~15mm

↑ WARNING

If the brake levers and pedals feel soft, there may be air or lack of fluid in a brake fluid hose. If the vehicle has this dangerous condition, do not ride the vehicle. Have the brake system inspected immediately by an authorized CFMOTO dealer.

Brake Fluid Level Inspection

Support the vehicle vertically;

Inspect the front and rear brake reservoir fluid levels;


If the brake fluid level is at area 'B': The level is proper;

If the brake fluid level is at area 'A': Drain out the redundant fluid until it is at area 'B';


If the brake fluid level is at area 'C' or cannot be seen: Replenish it with the same brake fluid until the level is at area 'B'.

∴WARNING

If the brake fluid level drops to area C frequently, the brake system is leaking, not sealed, or is damaged. Have the brake system inspected immediately by an authorized CFMOTO dealer.

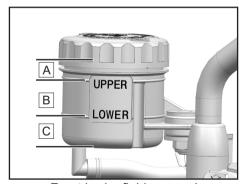

Front brake fluid reservoir

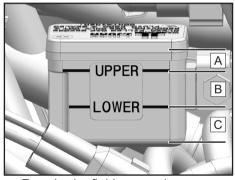

Rear brake fluid reservoir

Brake Fluid Replenishment

AWARNING

Brake fluid can irritate the skin.

Keep brake fluid out of the reach of children.

Keep brake fluid away from skin, eyes or clothing. Wear protective clothing and goggles when operating the vehicle.

If brake fluid is swallowed, see a doctor immediately.

If brake fluid touches the skin, wash the skin with plenty of clean water.

If brake fluid touches the eyes, wash eyes immediately with clean water and see a doctor immediately.

If brake fluid spills onto your clothing, change the clothing and wash it immediately.

∴WARNING

Brake fluid used for a long time will reduce braking efficiency. Please change the brake fluid according to the Periodical Maintenance Chart. Only use the same type DOT3 or DOT4 brake fluid as marked on the fluid reservoir. The mixing of different brake fluids may cause brake system damage or failure, so it is recommended to always use the original CFMOTO brake fluid. If you cannot make sure the original brand, please contact your authorized CFMOTO dealer for brake fluid maintenance.

⚠NOTE

When the brake fluid level goes down, it causes negative pressure inside the fluid reservoir, which may lead the reservoir gasket to sag. Remove the reservoir cap to release the pressure, adjust the reservoir gasket and then remount the gasket and cap.

Front brake fluid reservoir

Remove screws 1;

Remove the cover and reservoir gasket 2;

Replenish brake fluid to area 'B';

Remount the cover and reservoir gasket;

Mount the screws.




Remove screws 1;


Remove the cover and reservoir gasket 2;

Replenish brake fluid to area 'B';

Remount the cover and reservoir gasket;

Mount the screws.

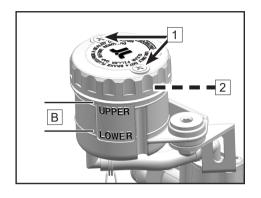

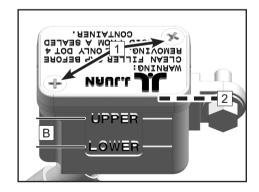


Brake Disc Inspection

Inspect brake discs periodically for any damage, out of shape, cracks or wear. Damaged brake discs may cause braking failure. Worn-out brake discs will decrease braking performance. If brake discs are damaged or exceed the wear limit, contact an authorized dealer to replace them with new ones immediately.

Inspect the thickness of front and rear brake discs in several positions.

Front brake discs wear limit: 0.14in (3.5mm)
Rear brake discs wear limit: 0.16in (4mm)

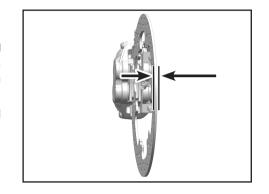


Brake Caliper Inspection

Inspect the brake calipers before riding. Inspect the minimum thickness of brake pads periodically. If the brake pads are too thin, their brackets will rub the brake discs, which will severely reduce brake effect and damage the brake pads.

Inspect the minimum thickness of brake pads on all brake calipers.

Brake pad minimum thickness: 0.1in (2.5mm)

If the brake pad thickness is less than the minimum limit, or the brake pads are damaged, please contact an authorized dealer immediately to replace the pads in pairs.

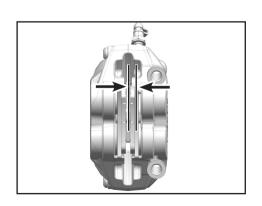

Anti-lock Braking System (ABS)

ABS is a safety system that prevents locking of the wheels when riding in a straight line or a curve without the influence of lateral forces.

With the assistance of ABS, when riding on gritty, water-logging, sliding or other low-adhesive force roads, the vehicle can use its full brake force and will face no risk of wheel locking.

↑ DANGER

Driving assistance can only prevent motorcycle from rollovers within the physical limits. In extreme driving conditions, such as high baggage loading center of gravity, changeable road conditions, steep slopes and full-speed braking without releasing the brake, motorcycle rollovers may occur.

ABS works with two independent brake circuits (front and rear brakes). When the brake electronics control unit detects a locking tendency in a wheel, ABS begins to work by adjusting the brake pressure. The adjusting process can be felt through as a slight bouncing of the front or rear brake pedals.

When turning on the ignition switch, the ABS indicator must be on, and then be off after the starting. If the ABS indicator is still on after the starting or lights up again during the riding, the ABS must have some fault. If a fault occurs, ABS cannot work, and the wheels may be locked during braking. The braking system itself is still working, and only the ABS adjustment system itself is failing.

SHOCK ABSORBER

Shock Absorber Inspection

Holding the handlebar and front brake, compress the front fork for several times to inspect it to see whether its working is smooth;

Visually inspect the front shock absorbers for oil leaks and front fork for scratches or friction noise;

After riding, inspect the front fork to see whether it has mud, dirt or debris, and if so, clean them, or they will lead to oil seal damage and shock oil leak;

Press down the seat several times to inspect it to see whether the rear shock absorber works smoothly; Inspect the rear shock absorber for oil leak;

If you have any doubt about the front or rear shock absorber performance, please contact an authorized CFMOTO dealer.

Rear Shock Absorber Adjustment


The shock absorber has been adjusted at the factory to the best position which is suitable for most situations.

Rebound damping adjustment

Rebound damping affects the response speed of the rebounding shock absorber. The higher the rebound damping setting 1, the slower the rebound speed of the suspension. The higher the rebound damping setting, the faster the rebound speed of the suspension.

Factory setting: 10 clicks Total: 20±2 clicks

Rotate the adjuster counter-clockwise (H direction) by straight screwdriver and record the number of times to decrease rebound damping. Rotate clockwise (S direction) by straight screwdriver and record the number to increase rebound damping.

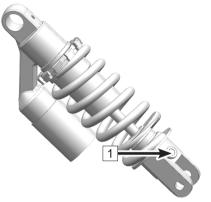

Shock absorber:K2C Shock absorber capacity:43mL

Counter-rotate according to the recorded number of times to restore factory setting, or rotate counter-clockwise (H direction) to the end, then rotate it clockwise (S direction) to the 10th click.

Contact a CFMOTO dealer to adjust rebound damping and do not adjust it by yourself.

↑ DANGER

This component contains high-pressure nitrogen. Improper operation may cause an explosion. Read the relevant instructions. Do not put it into fire, make holes in it or open it.

Front Shock Absorber Adjustment

The shock absorber has been adjusted to the best position, which is suitable for most situations, at the factory.

Compression damping adjustment

Compression damping affects the response speed of the compressing shock absorber. The higher the compression damping $\boxed{2}$ setting , the slower the compression speed of the suspension. The lower the rebound compression setting, the faster the compression speed of the suspension.

Factory setting: 10 clicks Total: 20±2 clicks

Rotate the adjuster counter-clockwise (H direction) by straight screwdriver and record the number of times to decrease compression damping. Rotate clockwise (S direction) by straight screwdriver and record the number of times to increase compression damping.

Counter-rotate according to the recorded number of times to restore factory setting, or rotate counter-clockwise (H direction) to the end, then rotate it clockwise (S direction) to the 10th click.



Shock absorber: KHL15-10

Shock absorber capacity: 455mL±2mL

Rebound damping adjustment

Rebound damping affects the response speed of the shock absorber. The higher the rebound damping 3 setting, the slower the rebound speed of the suspension. The lower the rebound damping setting, the faster the rebound speed of the suspension.

Factory setting: 10 clicks Total: 20±2 clicks

Rotate the adjuster counter-clockwise (H direction) by straight screwdriver and record the number of times to decrease rebound damping. Rotate clockwise (S direction) by straight screwdriver and record the number of times to increase rebound damping.

Counter-rotate according to the recorded number of times to restore factory setting, or rotate counter-clockwise (H direction) to the end, then rotate it clockwise (S direction) to the 10th click.

Contact a CFMOTO dealer to adjust rebound damping and do not adjust it by yourself.



Preload Adjustment

Preload influences the force needed for spring compression. The higher the preload, the more the force needed to compress the spring the same distance. The lower the preload, the less the force needed to compress the spring the same distance. The most obvious manifestation is that the higher the preload, the harder the spring.

Turn the preload adjusting nut 4 clockwise (H direction) to add spring preload. Turn the preload adjusting nut 4 counterclockwise (S direction) to reduce spring preload.

When adjusting the preload, please make sure that the number of mark lines 5 appearing on both left and right absorber preload adjusters are the same.

Contact a CFMOTO dealer to adjust rebound damping and do not adjust it by yourself.



ELECTRICAL SYSTEM AND LIGHT SIGNALS

Battery

The battery in this vehicle is a maintenance-free battery. Therefore, it is unnecessary to inspect the amount of battery electrolyte or add distilled water. As long as the electrolyte is poured into the battery, there is no need to remove the sealing strip. To ensure the optimum service life of the battery, keep the battery charged properly to ensure the battery has enough reserve capacity available to offer to the starter motor. When the motorcycle is used frequently, battery is automatically charged by the motorcycle charging system. If the motorcycle is only used occasionally, or used for a short time each ride, the battery may not have enough power. Batteries can also self-discharge which speed depends on battery type and environment temperature. When environment temperature rises for example, the speed could increase by a factor of 1 for every 15°C temperature rise.

In cold weather, if battery is not charged properly it can easily freeze the electrolyte, which may lead to battery cracking and electrode plates deformation. Full charging of the battery improves its freeze-proof capability.

Battery sulphation

A common battery failure is sulphation. When the battery is short of power for a long time, electrolyte can be sulphated. Sulphation is an abnormal product produced by chemical reaction in battery. If the battery sulphation occurs, the battery discharging can cause the battery plate permanent damage, and cause the battery to be impossible to be charged. When such a fault occurs, the only way is to replace the battery with a new one.

Battery maintenance

Always keep the battery fully charged, or it may damage the battery.

If the vehicle is driven infrequently, inspect the battery voltage weekly with a voltmeter. If it drops to below 12.8 volts, the battery should be charged (contact your dealer for inspection). If you will not use the vehicle for longer than 2 weeks, it is a must to charge the battery with a charger. Do not use an automotive quick-charger that may overheat the battery and damage it.

Battery recharger

Contact your dealer for battery charger's specifications.

Battery charging

Remove the battery from the vehicle.

Connect the charger wire, and ensure that the charging current is 1/10 A of the battery capacity, for example: for the capacity of 10 Ah battery, its charging current should be 1 ampere;

Ensure that the battery is fully charged before mounting .

↑ WARNING

Do not remove the battery's sealing strip, or the battery will be damaged. Do not mount an ordinary battery in this motorcycle, or the electrical system will not work properly.

When removing the battery, remove the negative terminal first, then the positive terminal. When removing the battery, firstly disassemble the negative pole, and then the positive pole. During mounting, the connection sequence of positive and negative poles is opposite to that of disassembly.

NOTE:

When charging a maintenance-free battery, always follow the instructions in this manual.

Battery maintenance

Clean the battery case with a soft brush dipped in a mixture of baking soda and water.

Use a wire brush to remove the corrosion of positive and negative lug plates and positive and negative anodes;

Maintenance-free batteries require special chargers (constant low voltage/ampere). Using traditional battery chargers will reduce battery life.

If the vehicle is not in use for one month or longer, please remove the battery and place it in a dry and cool place. Before remounting, fully charge the battery.

The battery must be removed from the vehicle when it is being charged.

Battery Mounting

Park the vehicle on flat ground;

Ensure that the vehicle's key is in the closed position;

Put in the battery;

Mount battery belt;

Mount the red positive pole wire(+);

Mount the black negative wire(-);

Remount the dust cover and seat.

∴WARNING

Avoid direct touching with the skin, eyes and clothing. Always protect eyes when working near the battery. Keep the battery out of reach of children. Keep the battery away from sparks, open flames, cigarettes, or other ignition points. When using or charging batteries in a confined space, ventilate the area.

Battery acid detoxification treatment:

External: Rinse the touched area with clean water.

Internal: See a doctor immediately.

Eyes: Rinse the eyes with clean water for 15 minutes and see a doctor immediately.

ACAUTION

Improper disassembly and assembly of positive and negative wires may lead to a short circuit between the battery and the vehicle body.


Lights


Headlight and foglight are adjustable. Rotate the light adjusting knob 1 to adjust light.

ACAUTION

Adjustment of high/low beams should be in accordance with local regulations. The standard is based on the light emitted when front and rear wheels touch down the ground and the driver sits on the vehicle.

All the lights are LED lights, which cannot be repaired if damaged or failed. Have your dealer replace the entire assembly if an LED is damaged or has failed.

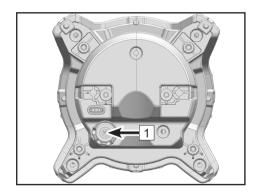

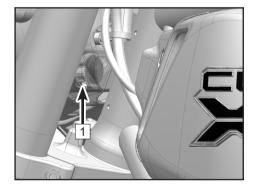


Fuses

Fuse box 1 is under the seat, it is visible after removing the seat and the dust cover. If a fuse is blown, inspect the electrical system for damage and replace the fuse with the new one.

↑WARNING

Do not use any wire to substitute for the standard fuse. Replace a blown fuse with a new one of the same ampere. Ampere value is shown on fuse.

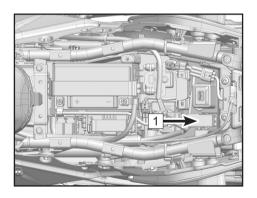

CATALYTIC CONVERTER

This motorcycle is equipped with a catalytic converter in the exhaust system. Platinum and rhodium contained inside the converter will react with carbon monoxide and convert hydrocarbons into carbon dioxide and water.

For proper operation of the catalytic converter, the following cautions must be followed:

Only use unleaded gasoline. Never use leaded gasoline which will significantly reduce the service life of the catalytic converter.

Do not let the vehicle skid when the ignition switch or the stop switch is off; Do not attempt to start the engine for a longer time when the battery is low in power. When the gear is not in Neutral, do not drag the vehicle or let the piston move. Under these improper conditions, extra unburned air/fuel mixture can flow into exhaust system, accelerating the reaction with the converter which will damage the heated engine, or reduce the converter performance when the engine is cooled off.

ACAUTION

Only use unleaded gasoline. Even only a little lead can damage the precious metals inside the catalytic converter, causing catalytic converter failure. Do not add anti-rust oil or engine oil into the muffler, which may result in catalytic converter failure.

EVAPORATIVE EMISSION CONTROL SYSTEM

This vehicle is equipped with an EVAP System. Please contact a CFMOTO dealer if the EVAP System has failed. Do not modify the System, or the System will not meet requirements for environmental regulations. After disassembly and repair, tube connections should be well connected without air leakage, blocking, and tubes should be without being squeezed, broken or damaged, etc. Fuel vapors from the fuel tank are drawn into a carbon tank through an absorption tube. The fuel vapors are absorbed by active carbon in carbon tank when the engine is stopped. When the engine is running, fuel vapors absorbed in the carbon tank will flow into the engine combustion chamber and get burned, avoiding environmental pollution by preventing fuel vapors being discharged directly into the air. Meanwhile, air pressure inside the fuel tank can be balanced by the absorption tube. If inner pressure of fuel tank is lower than the outside, it can be balanced through the air tube of the carbon tank and absorption tube. In this context, all tubes should always remain clear without being blocked or squeezed, etc., and the anti-toppling valve should be mounted correctly, otherwise the fuel pump could be damaged, the fuel tank can also become deformed or broken or other parts may be damaged.

MOTORCYCLE CLEANING AND STORAGE

General Precautions

Always keeping your motorcycle clean and in best performance will extend the vehicle's service life. Protecting your motorcycle with a high quality, breathable motorcycle cover.

- Always clean the motorcycle after the engine and exhaust system have cooled.
- Avoid applying detergents on seals, brake pads, and tires.
- Clean the vehicle by hand. Do not use high-pressure spray.
- Avoid all chemicals, solvents, detergents, and household cleaning products like ammonium hydroxide.
- Gasoline, brake fluid, and coolant will damage painted surfaces. Wash them off with water immediately if splashed on any surface.
- Do not use metal brushes, steel wool, and all other abrasive pads or brushes to clean the vehicle.
- Be cautious when washing the windshield, headlight cover, and other plastic parts as they can be easily scratched.
- Avoid water-cannon, as the water may penetrate into seals and electrical components to damage the vehicle.
- Avoid spraying water into areas such as air intakes, fuel system, electrical components, muffler outlets and the fuel tank lock.

Washing the Vehicle

- Rinse the vehicle with cold water to remove any loose dirt.
- Mix a bucket of detergent (specialized for motorcycles or automobiles) with water. Use a soft cloth or sponge to wash your motorcycle. If necessary, use a mild degreaser to remove any oil or grease. Start at the top of the motorcycle and wash bottom parts last.
- After washing, rinse your motorcycle with clean water to remove any residue (residue from the detergent can damage the components of your motorcycle).
- Dry off your motorcycle with a soft cloth and inspect it for any scratches.
- Start the engine and allow it to idle for several minutes. The heat from the engine will help dry off the vehicle in moist areas.
- Carefully ride the motorcycle at low speed and apply the brake several times. This will help to dry the brakes and restore their normal operating performance.
- Lubricate the drive chain to prevent rusting.

NOTE:

When riding in areas where the roads are salted or near the ocean, clean the motorcycle after your ride with cold water immediately. Do not use warm water to wash your vehicle as it accelerates the chemical reaction of the salt. After drying the vehicle, applying an anti-rust and anti-corrosion oil to all metal unpainted surfaces. In the case of riding during a rainy day or just washing the motorcycle, spray may form on the inside of the headlight shade. If this happens, start the engine and turn on the headlight to remove the moisture.

Decorating the Surface

After washing your motorcycle, polish the painted metal and plastic surfaces with a specialized motorcycle/ automobile wax. Wax should be applied every three months or as required, to avoid the surface from having satin lines or being lackluster. Always use non-abrasive wax and apply them according to the instructions.

Windshield and Other Plastic Parts

After washing, use a soft cloth to gently dry off plastic parts. When the motorcycle is dry, use specified cleaning or glazing procedures for windshield glass, light shades and other uncoated plastic parts.

ACAUTION

Plastic parts may deteriorate and break if they are exposed to chemical substances or household cleaning products such as gasoline, brake fluid, window cleaners, thread fastening glue, or other chemicals. If a plastic part is exposed to any chemical substance, wash it off with water immediately, and then inspect for damage. Avoid using abrasive pads or brushes to clean surfaces of plastic parts, as they will damage their luster.

Chrome and Aluminum

Chromium alloy and unpainted aluminum parts exposed to the air can oxidize, and thus will be lackluster. These parts should be cleaned with a detergent and polished with a lustering agent. Painted and unpainted aluminum wheels should be cleaned with specialized detergents.

Leather, Vinyl, and Rubber Products

If your motorcycle has leather accessories, use specialized detergents to clean them. Washing leather accessories with detergents and water will damage them and shorten their life.

Vinyl parts should be cleaned separately.

Tires and other rubber components should be treated with a rubber protective agent to prolong their life.

↑ DANGER

Special care must be given to tires, and it should be noted that rubber-protective agents applied to tires will not affect their functions. If tires are not treated properly, it may decrease the adhesive force between the tire and ground, possibly causing a loss of control.

Preparation for Storage

Clean the entire vehicle thoroughly.

Run the engine for about 5 minutes, stop the engine, then empty all engine oil.

↑ DANGER

Motorcycle oil is toxic. Dispose of used oil properly. Keep the used oil out of reach of children. If skin touches the oil it should be washed off immediately.

Replenish new engine oil.

Replenish fuel and fuel additive.

<u>∧</u>DANGER

Gasoline is extremely flammable and explosive under certain conditions. Turn the ignition key to "" position before operation. Do not smoke. Make sure the area is well ventilated and free of any source of flame or sparks and any appliance with a pilot light. Gasoline is a toxic substance. Dispose of gasoline properly. Keep the used oil out of reach of children. If skin touches the oil it should be treated immediately.

Reduce tire pressure at least by 20% during storage period.

Raise wheels off the ground using wood boards to keep the vehicle away from moisture.

Spray a film of engine oil on all unpainted metal surfaces to prevent rusting. Avoid spraying on rubber parts or on the brakes.

Lubricate drive chains and all cables.

Remove the battery. Store it in a cool and ventilated place. Ensure that the battery is fully charged according to the Periodic Maintenance Chart.

Wrap plastic bags over the muffler exhaust pipe to prevent moisture from entering.

Put a cover over the motorcycle to prevent dust and dirt.

Preparation After Storage

Remove the plastic bags from the muffler;

Charge the battery if necessary, then mount the battery;

Do all daily safety inspections;

Lubricate any pivot points as necessary;

Take a test ride.

COMMON PROBLEMS AND CAUSES

Problem	Component	Cause	Solution
	Fuel eveters	No fuel in fuel tank	Refuel
	Fuel system	Pump blockage or damage: poor fuel quality	Clean or replace
		Spark plug failure: excessive carbon deposits, too long-	Inspect or replace
		time usage	
		Spark plug cap failure: Poor contact or burning	Inspect or replace
	Ignition	Ignition coil failure: poor contact or burning	Inspect or replace
	system	ECU failure: Poor contact or burning	Inspect or replace
		Trigger coil failure: poor contact or burning	Inspect or replace
Failed engine		Stator failure: poor contact or burning	Inspect or replace
T alled erigine		Wiring failure: poor contact	Inspect or adjust
		Starting mechanism failure: worn or damaged	Inspect or replace
		Intake and exhaust valves, and valve seats failure: too	Inspect or replace
		much fuel colloidal or too long-time use	
	Cylinder	Cylinder, piston, piston ring failure: too much fuel	Inspect or replace
	system	colloidal or wear	
		Intake pipe leakage: too long-time use	Inspect or replace
		Valve timing failure	Inspect or replace

	Valve and	Intake and exhaust valves, excessive carbon deposits	Repair or replace
	piston Clutch	in the piston: poor fuel quality and poor oil quality Clutch slips; poor oil quality, too long-time use and overloading	Adjust or replace
Insufficient	Cylinder and	Cylinder, piston rings wear; poor oil quality and too	Replace oil
power	ring	long-time use	
	Brake	Incomplete separation of brake; too-tight brake	Adjust
	Main chain	Too-tight drive chain; improper adjustment	Adjust
	Engine	Engine overheating; too-rich or too-lean mixture, poor oil and fuel quality, shelters, etc	Adjust or replace
	Spark plug	Improper spark plug clearance	Adjust or replace
	Intake pipe	Air leakage of intake pipe; too long-time use	Adjust or replace
Insufficient	Cylinder head	Air leakage for cylinder head or valves	Inspect or replace
power	Electric	Electrical system failure	Inspect or repair
	system	•	
	Air filter	Air filter clogging	Clean or adjust
	Cables	Poor connections	Adjust
	Left and right	Poor switch contact or switch damage	Adjust or replace
Failed headlights	switches	_	
and taillights	Headlight	Bulb and lamp holder failure or damage	Adjust or replace
	Regulator	Poor connection or burning	Inspect or replace
	Magneto	Poor connection or burning	Inspect or replace

Failed horn	Battery	No electricity	Charge or replace
	Left switch	Horn button failure or damage	Adjust or replace
	Cables	Poor contact	Adjust or repair
	Horn	Horn damage	Adjust or replace

The listed above are the common problems of a motorcycle. If your motorcycle has certain problems (especially in the electronic fuel injection system, fuel evaporation system), please contact an authorized CFMOTO dealer to inspect and repair the vehicle in time.

↑ DANGER

Do not try to fix the problems without professional help, otherwise there may be safety risks or accidents. The user shall be responsible for any accident related to any repairs or maintenance not performed by a CFMOTO dealer.

GENERAL TORQUE CHART

Туре	Torque (N·m)	Туре	Torque (N·m)
M5 bolt and nut	5±1	M5 screw	4±1
M6 bolt and nut	10±1	M6 screw	9±1
M8 bolt and nut	20~30	M6 flange bolt and nut	12±1
M10 bolt and nut	30~40	M8 flange bolt and nut	20~30
M12 bolt and nut	40~50	M10 flange bolt and nut	30~40

CRUCIAL TORQUE CHART

Heritage			
Туре	Thread	Number	Tightening Torque (N•m)
Engine front mounting bolt	GB/T5789 M10×1.25×110	2	45~50
Engine rear mounting nut	GB/T6187 M10×1.25	2	45~50
Sub-frame mounting bolt	M10×1.25×20	4	40~50
Front axle	M20×1.5	1	105~110
Rear axle nut	M18×1.5	1	135~140
Rear fork shaft nut	M20×1.5	1	135~140
Steering column locking nut	A000-050007	1	20~25
Upper triple clamp locking screw	M26×1	1	110
Upper and lower shock absorber locking screw	GB/T 70.1 M8×25	6	20~25

Rear shock absorber upper mounting bolt	M12×1.25×75	1	50~55		
Rear shock absorber lower mounting bolt	GB/T 70.1 M12×1.25×60	1	50~55		
A-shape swing arm front mounting bolt	M12×1.25×75	1	50~55		
A-shape swing arm middle mounting bolt	GB/T 70.1 M12×1.25×120	1	50~55		
Pull rod welding assy mounting bolt	M10×1.25×120	1	45~50		
Front brake caliper mounting bolt	GB/T70.1 M10×1.25×60	2	45~50		
Door for don monunting holt	GB/T5789 M8×25	3	25. 20		
Rear fender mounting bolt	GB/T70.1 M8×20	3	25~28		
Adventure					
Туре	Thread	Number	Tightening Torque (N•m)		
Sub-frame mounting bolt	M10×1.25×20	4	40~50		
Front axle	A000-070001 M20×1.5	1	105~115		
Rear axle nut	A000-110011 M18×1.5	1	130~140		
Rear fork shaft nut	A000-060004 M20×1.5	1	130~140		
Steering column locking nut	A000-050007	1	20~25		
Upper triple clamp locking screw	6NTA-050003 M26×1	1	110		

Upper and lower shock absorber locking screw	GB/T 70.1 M8*25	6	20~30
Rear shock absorber upper mounting bolt	M12×1.25×75	1	50~60
Rear shock absorber lower mounting bolt	GB/T 70.1 M12*1.25*60	1	50~60
A-shape swing arm front mounting bolt	M12×1.25×75	1	50~60
A-shape swing arm middle mounting bolt	GB/T 70.1 M12*1.25*120	1	50~60
Pull rod welding assy mounting bolt	M10×1.25×120	1	40~50
Front brake caliper mounting bolt	GB/T70.1 M10×1.25×60	2	45~50
Rear fender mounting bolt	GB/T5789 M8×25 GB/T70.1 M8×20	3	25~28



No.116, Wuzhou Road, Yuhang Economic Development Zone, Hangzhou 311100, Zhejiang Province, China

Tel: 86-571-86258863

E-mail: service@cfmoto.com.cn

Fax: +86-571-89265788 Http://global.cfmoto.com